


 HomeLink®

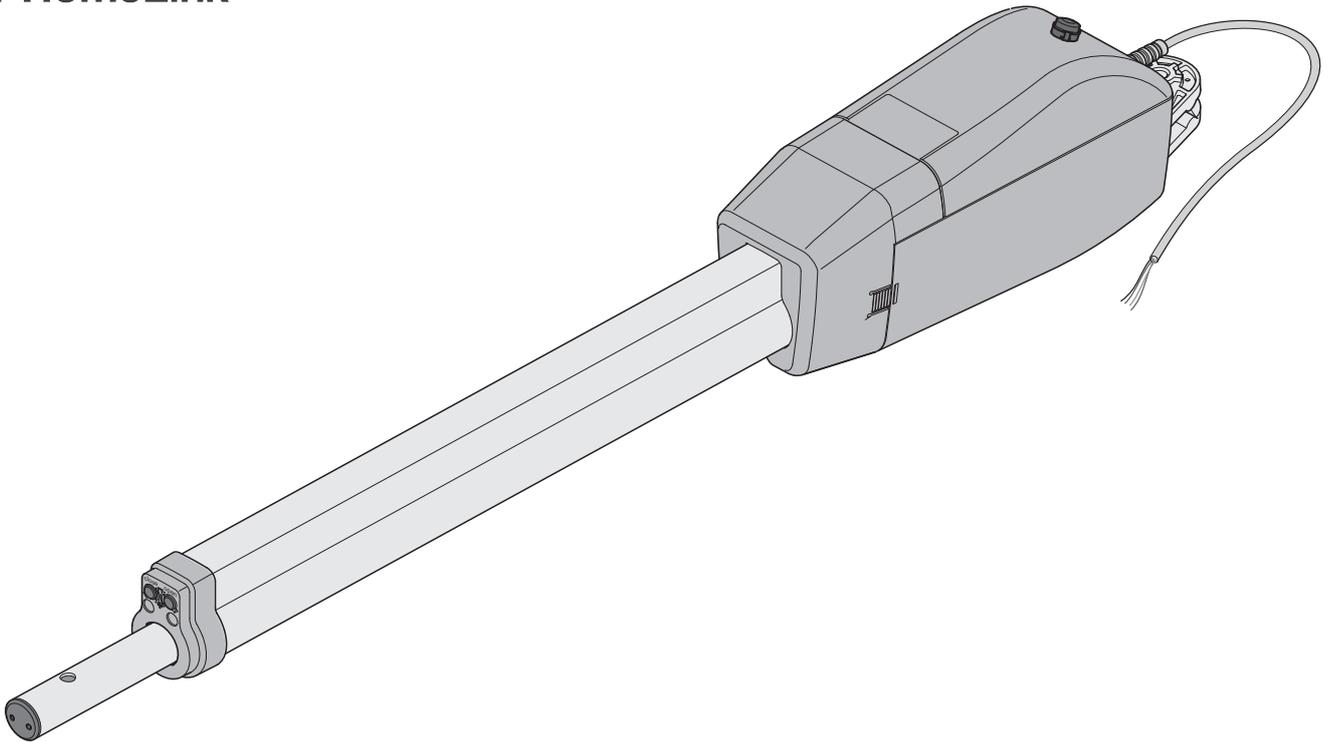

EN TRANSLATION OF THE ORIGINAL INSTALLATION AND OPERATING MANUAL

Swing gate operator twist 350



Serial number

Table of contents

General Information	3	Connecting 2-wire photo eye.....	30
Symbols.....	3	Connecting 4-wire photo eye.....	30
Safety instructions	3	Connecting external consumers	31
Intended use.....	3	Connecting potential-free relay contact.....	31
Improper use	3	Connecting motor	31
Combined operation	3	Attaching connecting cable set.....	31
Permitted gate leaf dimensions	4	Main switch.....	31
Technical data	4	Maintenance and care	32
Dimensions.....	5	Safety instructions	32
Functional description	5	Regular testing	32
Installation preparations	7	Miscellaneous	33
Safety instructions	7	Disassembly	33
Tools required.....	7	Disposal.....	33
Personal protective equipment.....	7	Warranty and customer service	33
Scope of supply	7	Troubleshooting	34
Installation	8	Tips on troubleshooting	34
Tips for installation.....	8	DTA-1 control unit	36
Operator installation position.....	8	DIP switch settings	36
A/B dimension table (reference values)	9	TorMinal settings	36
Fittings.....	10	Wiring diagram	37
Installing fittings.....	10		
Installing the control unit.....	11		
Connecting control unit to power mains (AC 230 V)	11		
Connecting operator to control unit	13		
Installation situation: "Opening gate outwards"	14		
Adjust end positions	15		
Locking and unlocking the operator	16		
Initial operation	17		
Safety instructions	17		
Preparing continuous operation	17		
Adjusting the gate leaf length	17		
Enabling continuous operation	17		
Performing learning run	18		
Resetting the control unit.....	18		
Radio receiver	19		
Connecting external antenna	20		
Operation/Use	21		
Safety instructions	21		
Emergency release in case of power failure	21		
Normal mode.....	21		
Obstacle detection.....	21		
Summer-winter mode	21		
Opening and closing gate.....	21		
Functions and connections	23		
Safety instructions	23		
Jumper	23		
Button on control unit	23		
Potentiometer for gate leaf length	23		
Radio connector	23		
TorMinal interface	23		
Light-emitting diodes (LED).....	24		
DIP switches.....	25		
Automatic closing function.....	26		
Fuses.....	27		
Transformer terminal	27		
DC 24 V electric lock.....	27		
Connecting warning light	28		
Connecting button	28		
Connecting key switch.....	29		
Connecting button (defined opening)	29		
Connecting button (gate STOP).....	29		
Connecting button (defined closing).....	29		
Connecting EMERGENCY STOP	30		

General Information

Symbols



CAUTION SYMBOL:

Important safety instructions!

To ensure personal safety, it is important to observe all instructions. Save these instructions!



IMPORTANT INFORMATION SYMBOL:

Information, useful advice!

1 (1) Refers to a respective picture in the introduction or main text.


Safety instructions

General

- These installation and operating manual must be read, understood and complied with by persons who install, use or perform maintenance on the operator.
- The manufacturer does not accept liability for damage or interruptions to business resulting from non-observance of the installation and operating manual.
- Always ensure compliance with accident prevention regulations and current standards in each respective country.
- All applicable Directives and standards must be observed and complied with for installation and operation, such as: EN 12453, EN 12604, EN 12605.
- Observe and comply with the "ASR A1.7 Technical Regulations for Workplaces" of the German Committee for Workplaces (ASTA), which is mandatory for the operator in Germany.
- Before doing any work on the gate or operator, disconnect it from the power supply and lock it to prevent reconnection.
- Electrical wiring must be firmly secured to prevent displacement.
- There is danger due to the crushing and shearing points presented by the mechanism and the closing edges of the gate.
- Never operate a damaged operator.
- After installation and commissioning, all users must be instructed in the function and operation of the swing gate operator.
- Only use OEM (Original Equipment Manufacturer) spare parts, accessories, and mounting material.

Storage

- The operator must be stored in an enclosed, dry area at a room temperature between -20°C to $+70^{\circ}\text{C}$.
- The operator should be stored horizontally.

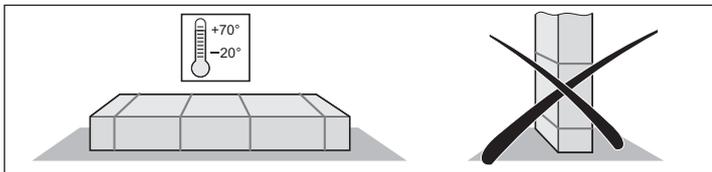

Operation

- Do not allow children or persons who have not been instructed to operate the gate control unit.
- Open and close the gate only if there are no children, persons, animals or objects within its area of movement.
- Never put your hand near the gate when it is moving or near moving parts.
- Regularly check the safety and protection functions and repair faults immediately. See 'Care and maintenance'.
- Do not drive through the gate until it is fully open.
- Set the force tolerance as low as possible.

- For automatic closing, secure the main and auxiliary closing edges in accordance with the applicable directives and standards.
- Remove the key to prevent unauthorised use.

Radio remote control

- If a risk of injury could occur due to radio malfunctions on the transmitter or radio receiver, use additional safety devices.
- Only use the radio remote control when the range of movement of the gate is visible and free of obstacles.
- Store the transmitter so that it is protected from unintended operation, e.g., by children or animals.
- Do not use the radio remote control in areas with sensitive radio communications or systems, e.g. airports or hospitals.
- When significant interference occurs due telecommunications equipment, contact the responsible Telecommunications Office which has radio interference measuring equipment (radio location).

Type plate

- The type plate is inside the cover of the control unit.

Intended use



IMPORTANT INFORMATION!

After installation of the operator, the person responsible for the installation must complete an EC declaration of conformity for the gate system in accordance with Machinery Directive 2006/42/EC and apply the CE mark and a type plate. This is also required for private installations and also if the operator is retrofitted to a manually operated gate. This documentation and the installation and operating manual are retained by the operator.

- The operator is designed exclusively for opening and closing one- and two-leaf swing gate installations. Any other use does not constitute intended use.
- The manufacturer accepts no liability resulting from use other than intended use and the warranty expires. The user bears the sole responsibility for any risk involved.
- The operator must be in good technical condition, and it must be used for its intended purpose with awareness of the hazards. Observe the installation and operating manual.
- Only operate the twist 350 with DTA-1 control unit.
- Only use the twist 350 operator and DTA-1 control unit in private, non-industrial settings.
- Repair faults without delay.
- Only use operator on gates which comply with all valid standards and directives: e.g. EN 12453, EN 12604, and EN 12605.
- Uphold safety distances between the gate leaf and the environment in accordance with EN 12604.
- Only use stable and rigid gate leaves. Gate leaves must not bend or twist when opening and closing.
- Ensure there is little play in the hinges of the gate leaf.

Improper use

- Opening or closing flaps, e.g. for access to roofs or similar.

Combined operation

- 1x twist 350 and 1x twist XL mixed operation possible.
- 1x twist 350 and 1x twist 200 E or 200 EL mixed operation only possible in connection with DTA-1 control unit and the "twist XS" conversion set (Item number: 3248V000).


General Information

Permitted gate leaf dimensions

- Gate weight per leaf: max. 700 kg ⁽¹⁾
- Gate width per leaf: max. 4.0 m ⁽²⁾
- Fill %: See "Fill table"

(1) With max. 1.5 m gate leaf length, 1-leaf gate.

(2) With max. 250 kg gate leaf weight, 1-leaf gate.

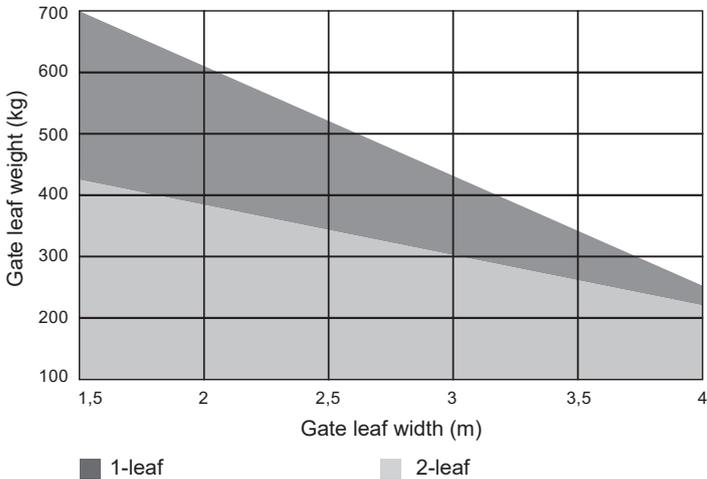

Fill table

Height (m)	Fill (%)					
	1.5	2	2.5	3	3.5	4
3	100	100	90	80	60	40
2.5	100	100	100	90	70	50
2	100	100	100	100	90	70
1.5	100	100	100	100	100	90
1	100	100	100	100	100	100
0.5	100	100	100	100	100	100
Width (m)	1.5	2	2.5	3	3.5	4

Specifications valid for B dimensions 320 mm and A dimensions 100 mm; recorded values for gate panel thickness 50 mm and centre rotation point, related to the maximum given gate weight.



Technical data

	twist 350
Mains voltage	AC 220–240 V
Rated frequency	50–60 Hz
Storage locations in radio receiver	112
Operating time	S3 = 40 %
travel length movement range	495 mm
Operating temperature	↕ -30 °C to ↕ +70 °C
Emission value according to operating environment	52 dB(A)
IP protection class control unit	IP65
IP protection class operator	IP44
IP-code	I
Max. feed speed	25 mm/s
Max. traction and pressure force per leaf	2,500 N
Rated, pulling and pushing force per leaf	830 N
Maximum power consumption per leaf	260 W
Maximum current consumption per leaf	1.5 A
Rated power consumption per leaf	96 W
Rated current consumption per leaf	0.55 A
Power consumption on power-saving mode	3.8 W
Maximum gate weight per leaf	700 kg
Maximum leaf length	4 m
Gate inclination	0 %

General Information

Dimensions

All dimensions are in millimetres.

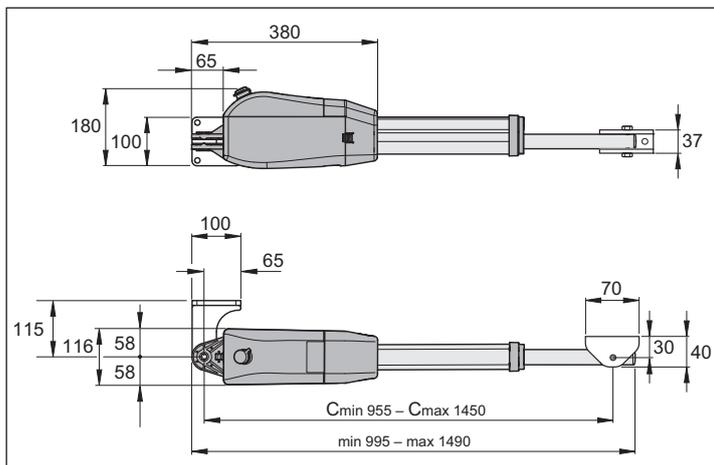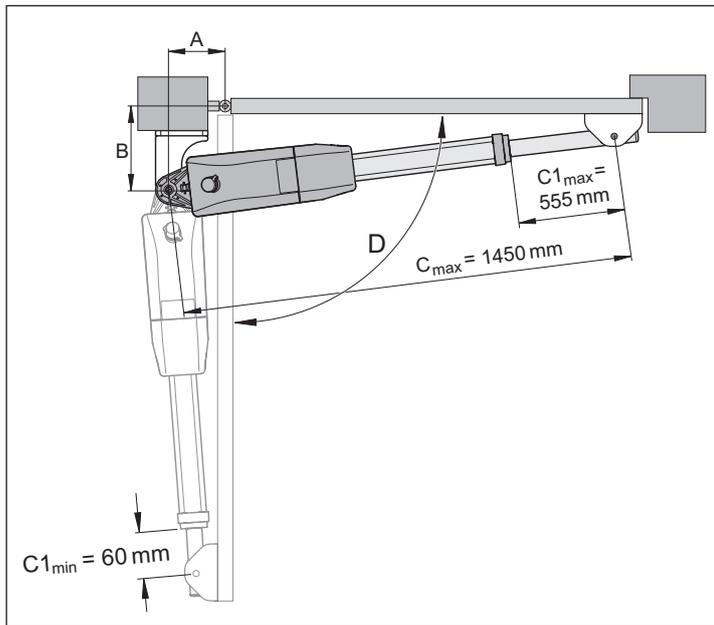

Functional description



IMPORTANT INFORMATION!

The "Gate OPEN" + "Gate CLOSE" end positions are set by internal limit switches in the operator and detected during operation.

The gate leaf is opened and closed by retracting and extending the gate operator. When the defined end positions are reached the operator is automatically switched off by the limit switch.

Closing the gate



IMPORTANT INFORMATION!

A mechanical stop at the "Gate OPEN" and "Gate CLOSE" end position is absolutely essential. An electric lock can be used as an additional lock.

The gate leaf does not require a lock, because the operator is self-locking. The gate cannot be pushed open manually without damaging the operator or the fittings.

Wireless actuation

The operator can be operated with the supplied transmitter. The transmitter must be programmed for the radio receiver.

Safety facilities

The control unit has an automatic force monitor. The necessary force is programmed during a learning run.

When the operator requires a higher force than the one programmed, the operator stops and reverses.

Various safety devices can be connected to the control unit, see "Functions and connections"

Examples:

- Photo eye
- Safety contact strip with separate evaluation unit

EN Remote control / Radio receiver

EU Conformity Declaration

Messrs

SOMMER Antriebs- und Funktechnik GmbH
Hans-Böckler-Straße 21-27
D-73230 Kirchheim/Teck

declares herewith that the product designated below complies with the relevant fundamental requirements as per Article 3 of the R&TTE Directive 1999/5/EG, insofar as the product is used correctly, and that the following standards apply:

- Product: RF Remote Control for Doors & Gates
- Type: RM01-868, RM02-868-2, RM02-868-2-TIGA, RM03-868-4, RM04-868-2, RM08-868-2, RM01-434, RM02-434-2, RM03-434-4, RM04-434-2, RX04-RM02-868-2-wi6, RX04-RM02-868-2-TT, RX04-RM02-434-2, RX04-RM02-434-2-TT, RX01-RM02-868-2/4, RX01-RM02-434-4, TX02-868-2, TX02-868-2-UP, TX03-868-4, TX03-868-4-XP, TX35-868-1/5, TX04-868-10/30, TX08-868-4, TX02-434-2, TX03-434-4-XP, TX04-434-10 TX01-868, TX01-434, TX45-868-10, TX-45-434-10, RM10-868-1

The relevant guidelines and standards are:

- EN 60950-1
- EN 300 220-1
- EN 300 220 -2
- EN 301 489-1
- EN 301 489-3

Kirchheim/Teck, 07.01.2014
Jochen Lude
Responsible for documents

General Information

Declaration of Installation

for the installation of an incomplete machine in accordance with the Machinery Directive 2006/42/EC, Appendix II, Section 1 B

SOMMER Antriebs- und Funktechnik GmbH

Hans-Böckler-Straße 21–27
D-73230 Kirchheim/Teck
Germany

hereby declares that the swing gate operator

twist 350

was designed, developed and manufactured in compliance with

- Machinery Directive 2006/42/EC
- Low Voltage Directive 2014/35/EU
- Directive on Electromagnetic Compatibility 2014/30/EU
- RoHS Directive 2011/65/EU.

The following norms were used:

- | | |
|----------------------------------|--|
| • EN ISO 13849-1, PL "C" Cat. 2 | Safety of machines – Safety-related parts of controls
– Part 1: General design guidelines |
| • EN 60335-1/2, where applicable | Safety of electrical appliances/operators for gates |
| • EN 61000-6-3 | Electromagnetic compatibility (EMC) – interference |
| • EN 61000-6-2 | Electromagnetic compatibility (EMC) – interference resistance |
| • EN 60335-2-103 | General safety requirements for household and similar electrical appliances
– Part 2: Special requirements for operators for gates, doors and windows |

The following requirements of Annex 1 of the Machinery Directive 2006/42/EC are met:

1.1.2, 1.1.3, 1.1.5, 1.2.1, 1.2.2, 1.2.3, 1.2.4, 1.2.6, 1.3.2, 1.3.4, 1.3.7, 1.5.1, 1.5.4, 1.5.6, 1.5.14, 1.6.1, 1.6.2, 1.6.3, 1.7.1, 1.7.3, 1.7.4

The special technical documentation was prepared in accordance with Annex VII Part B and will be submitted to regulators electronically on request.

The incomplete machine is intended for installation in a gate system only to form a complete machine as defined by the Machinery Directive 2006/42/EC. The gate system may only be put into operation after it has been established that the complete system complies with the regulations of the above EC Directive.

The undersigned is responsible for compilation of the technical documents.

Kirchheim, 20-04-2016



i.V.

A handwritten signature in blue ink, appearing to read 'Jochen Lude', written over a horizontal line.

Jochen Lude
Responsible for documents

Installation preparations

Safety instructions



CAUTION!
DANGER OF DESTRUCTION BY VOLTAGE PEAKS.
Voltage peaks, e.g. from welding machines, can destroy the control unit.


- Do not connect the control unit until all mounting tasks on the power supply have been concluded.




CAUTION!
Before doing any work on the gate or operator, disconnect the control unit from the power supply and secure it to prevent reconnection.

- Lay cables in conduits approved for this purpose, e.g. for laying in underground installations.
- Only qualified electricians may connect the control unit to the power supply.
- Install in accordance with the installation and operating manual.
- Before installing the operator, take locking mechanisms (e.g. electric locks or bars) out of operation or disassemble them.
- Ensure that the drive is securely fastened to posts, pillars, and gate leaves to withstand large forces generated when opening and closing the gate.
- Flying sparks can damage the operator, e.g. when welding on posts or gate leaves. Cover or disassemble operator before welding.
- If a button is used for opening or closing, it must be installed out of the reach of children at a height of at least 1.6 m.
- Only use permissible fastening materials.

Tools required

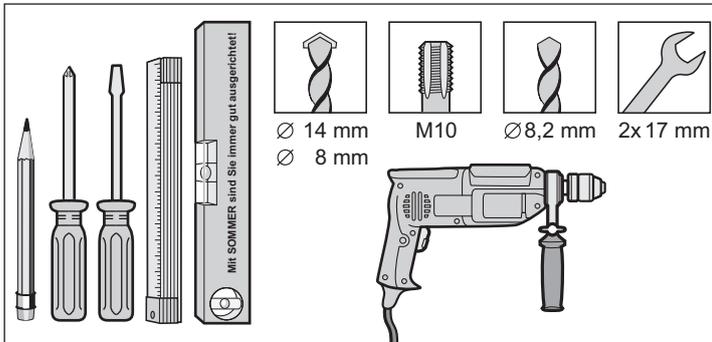


Personal protective equipment

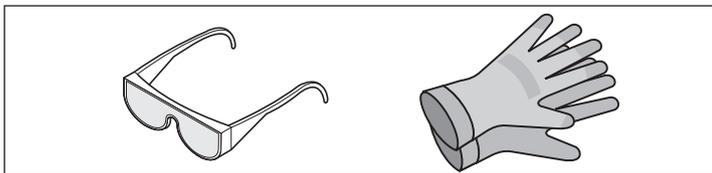

- Safety glasses (for drilling)
- Work gloves

Scope of supply


- Check the scope of delivery before installation to prevent unnecessary work and costs.
- The actual scope of supply may vary depending on the operator version.

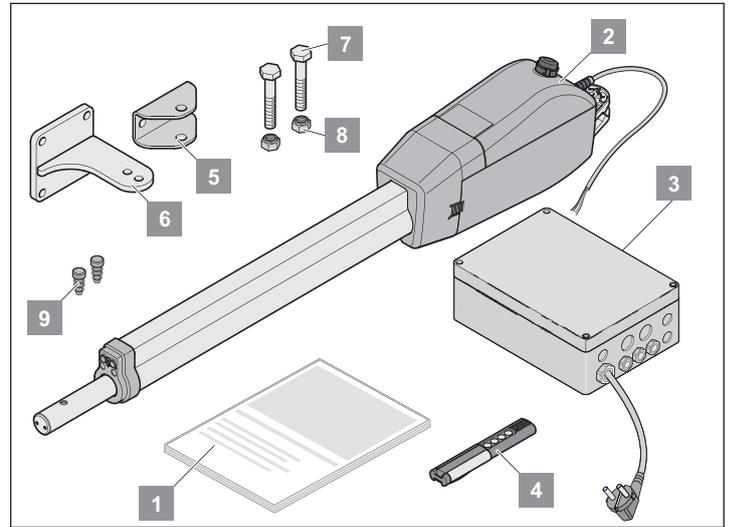

Complete set

		1-leaf	2-leaf
Weight		14 kg	22 kg
Package (L x W x H):		1,190 x 246 x 203 mm	
1	Assembly and operating manual	1x	1x
2	Operator with cable	1x	2x
3	Control unit in housing (including radio receiver, transformer, and power plug)	1x	1x
4	Hand-held transmitter, including battery	1x	1x
5	Fittings for gate leaf	1x	2x
6	Fittings for post or pillar	1x	2x
7	Hex bolt (M10 x 55 mm)	2x	4x
8	Locknut (M10)	2x	4x
9	Plug	2x	4x

Installation

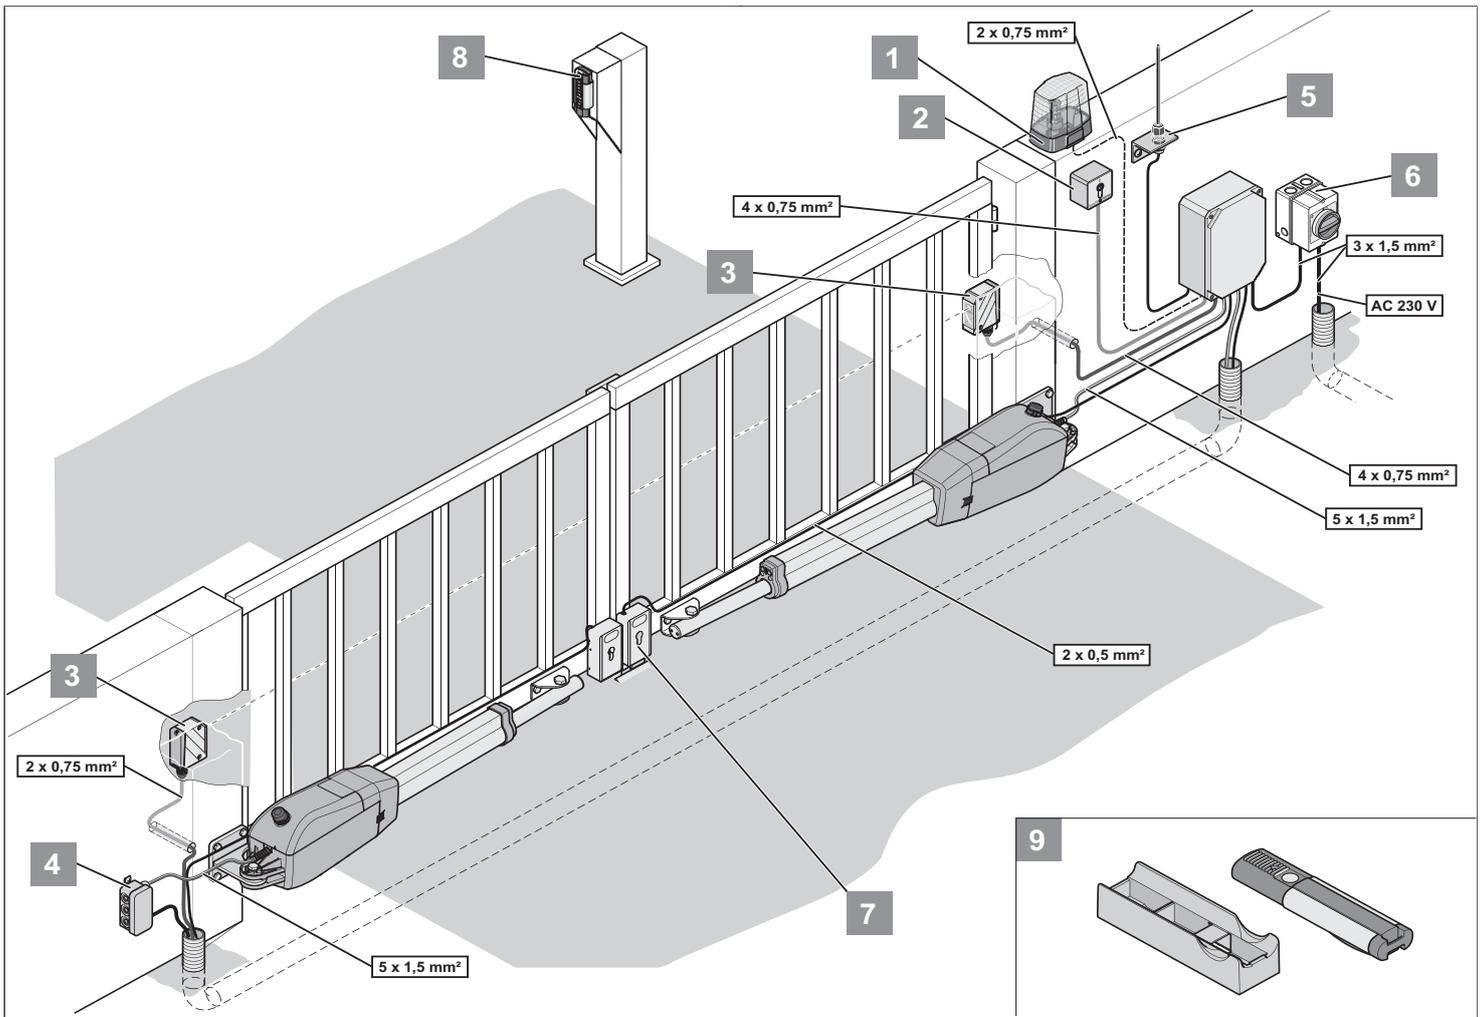

1	Warning light DC 24 V/24 W
2	Key switch (1 or 2 contact)
3	Photo eye
4	Connector wiring set 7 m
5	External antenna (including cable)
6	Main switch (lockable)
7	DC 24 V electric lock/An electric lock can be connected to each gate leaf
8	Telecody
9	Car/wall holder for transmitter

Tips for installation

Define the installation location of the control unit together with the operator.

Install the housing so that it is hidden from unauthorised persons to prevent deliberate damage to the housing and control unit.

Attach threshold or stop bar to the gate:

- Gate leaf length longer than 3 m
- 2-leaf gate




IMPORTANT INFORMATION!

Additional pulse transmitters are: transmitters, Telecody, wireless indoor switches and key switches. For transmitters, Telecody or the radio interior push-buttons, no connecting line must be installed for operation.

Operator installation position

Install operator horizontally. Note installation position of motor; it must always point upright.

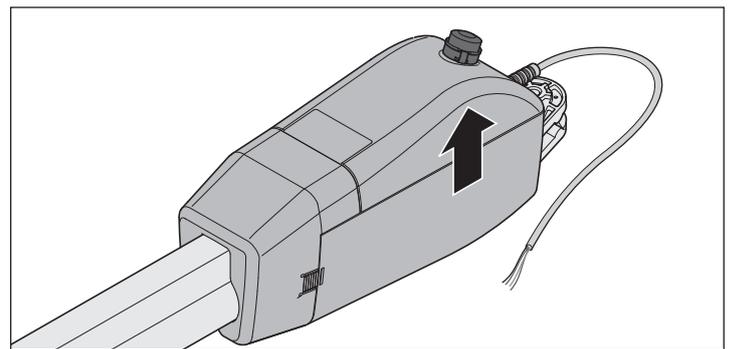

Installation

A/B dimension table (reference values)



IMPORTANT INFORMATION!

Before mounting, define the A/B dimensions. Without these dimensions, the operator cannot be correctly installed and operated.

- Observe the different post and pillar dimensions.

B	A		100	120	140	160	180	200	220	240	260	280	300	320	Max. gate leaf width Without electric lock										
	C	C1																							
140	1200	326	1234	360	1264	390	1295	421	1331	457	1371	497	1409	535	1411	537	1403	529	1424	550	1424	550	1430	556	3.5 m
			92°	99°	103°	105°	111°	117°	121°	112°	104°	104°	100°	98°											
160	1222	348	1247	374	1279	405	1307	433	1340	466	1377	503	1414	542	1428	554	1420	546	1436	562	1440	566	1440	566	
			92°	95°	100°	102°	106°	111°	116°	111°	103°	102°	99°	96°											
180	1235	365	1267	393	1299	425	1326	452	1351	477	1385	511	1424	550	1442	568	1446	572	1443	569	1439	565	1437	563	
			91°	94°	99°	101°	102°	106°	111°	109°	104°	99°	95°	92°											
200	1264	390	1289	415	1319	445	1345	471	1372	498	1398	524	1433	559	1446	572	1441	567	1444	570	1443	569	1446	572	
			91°	93°	98°	100°	102°	103°	107°	104°	98°	95°	92°	90°											
220	1286	412	1310	436	1341	467	1367	493	1394	520	1404	530	1442	568	1444	570	1444	570	1444	570					
			91°	93°	98°	100°	102°	98°	103°	98°	94°	91°													
240	1308	434	1332	458	1361	487	1387	513	1414	540	1416	542	1435	561	1444	570	1445	571							
			91°	93°	97°	99°	100°	95°	95°	93°	90°														
260	1331	457	1355	481	1381	507	1409	535	1431	557	1438	564	1445	570											
			91°	93°	96°	99°	99°	95°	92°																
280	1354	503	1378	504	1404	530	1430	556	1448	573	1446	572													
			91°	93°	96°	98°	96°	91°																	
300	1377	496	1401	526	1425	551	1448	574																	
			91°	93°	95°	96°																			
320	1400	526	1420	546	1443	569																			
			91°	91°	93°																				



IMPORTANT INFORMATION!

Select A/B dimensions so the desired opening angle (D) is reached. The specified opening angle is a reference value for the largest possible angle.


In case of gate leaf lengths greater than 2.5 m, the B dimension must amount to at least 180 mm.



IMPORTANT INFORMATION!

The reference values in the table have been calculated based on the following data:

- Wind speed 28.3 m/s
- Gate height 2.0 m
- Gate width 2.5 m
- Gate filling 35 %, uniformly distributed
- Without electric lock

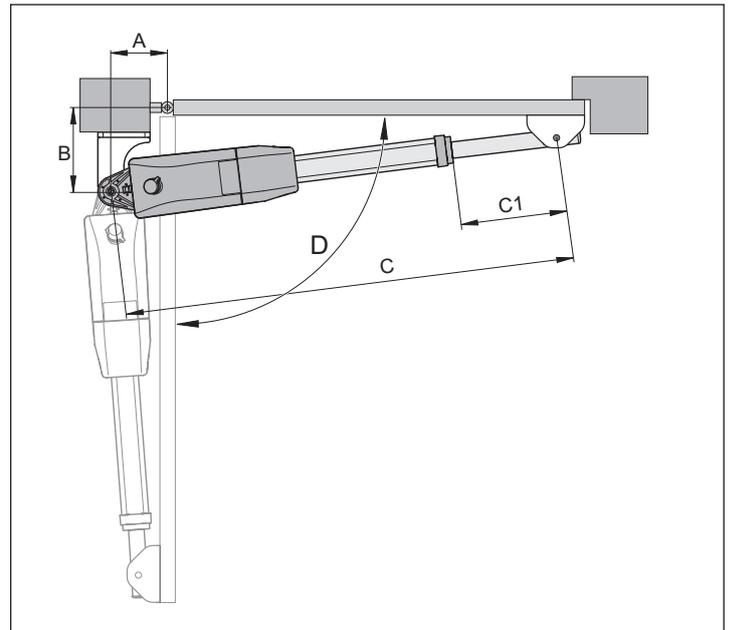

Installation

Fittings

IMPORTANT INFORMATION!
The strength of the included fittings is designed for the operator. The warranty expires if other fittings are used.

IMPORTANT INFORMATION!
The B dimensions must be at least 120 mm (see "A/B dimension table"). Compensation for smaller B dimensions with a space plate under the post fitting.

➤ Clearances between the gate leaf and post or gate leaf and operator must be maintained in accordance with the applicable standards.

CAUTION!
Only use permissible fastening materials.

➤ Fasten fittings on stone or cement pillars with expansion dowels or adhesive-bonded anchors. The fastenings must not loosen during operation.

➤ Flying sparks can damage the operator, e.g. when welding on posts or gate leaves. Cover or disassemble operator before welding.

CAUTION!
Welding and grinding residues accelerate corrosion of the fittings.
• After mounting the fittings, do not perform any more welding or grinding work.


Steel posts

- Note the thickness of the post.
- Weld or bolt the fitting directly to steel posts.


Brick or concrete pillars

- Uphold the distance of the fastening holes from the pillar edge. The distance depends on the type of expansion dowels or adhesive-bonded anchors. Observe the recommendations of the manufacturer.

Post or pillar fitting

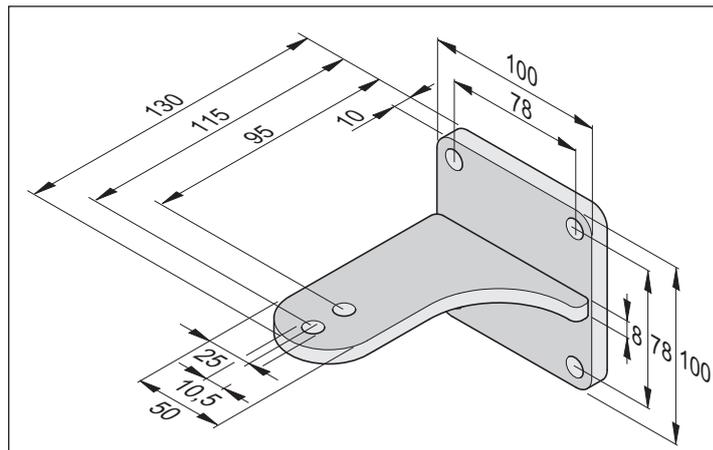


Gate leaf fitting

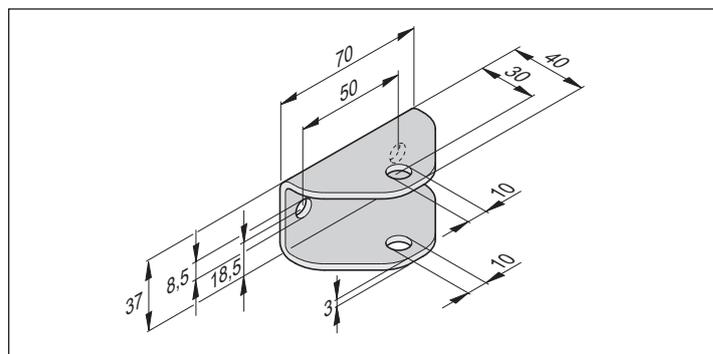

Installing fittings


1. Close the gate by hand.
2. Compare the A/B dimensions with the A/B dimension table.
3. Fasten the post/pillar fitting temporarily (e.g. with a clamp).
4. Check installation situation and dimensions.
⇒ Uphold distance to the floor: at least 50 mm.
5. Fasten post/pillar fitting.

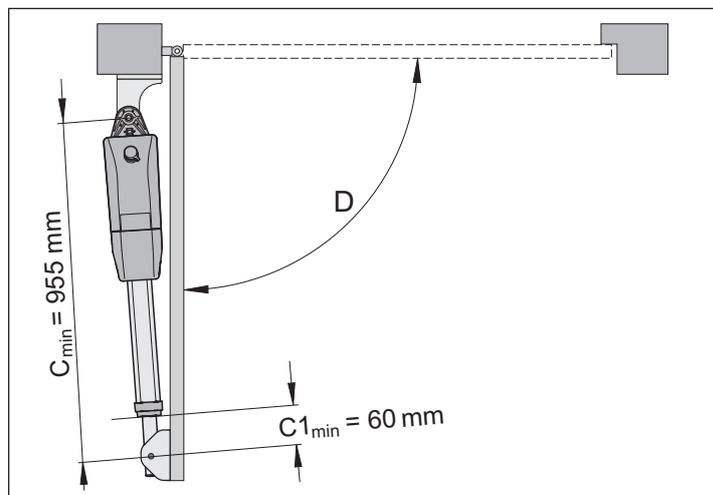

6. Manually move the gate to the "Gate OPEN" position. Note the maximum possible opening angle D from the A/B dimension table.
7. Hang the operator in the post fitting and secure it with a screw.
⇒ The operator push rod is at maximum retraction as delivered.

Installation

8. Unscrew push rod, at least to $C1_{min}$.
9. Fix the gate leaf fitting to the push rod.
10. Insert the screw from above.
11. Fasten the gate leaf fitting temporarily to the gate (e.g. with a clamp).
12. Unlock the operator, see "Locking and unlocking the drive".
13. Close the gate by hand.

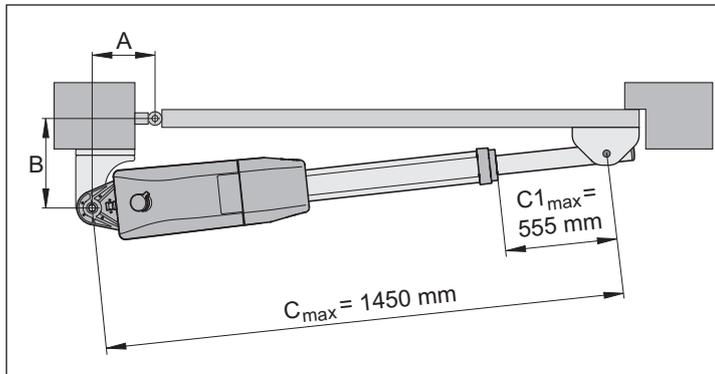


i **IMPORTANT INFORMATION!**
The smaller the $C1$ dimension, the higher the stability.

14. Measure $C1$ dimensions and set between $C1_{min}$ and $C1_{max}$.
Do not exceed $C1_{max}$.
15. Check that the operator is horizontal in the positions:
 - "Gate OPEN"
 - "Gate CLOSE"
 - Opened 45°
16. Check the position of the gate leaf fittings.
17. Fix gate leaf fittings.
18. Screw in the nuts of the connecting screws (operator to fitting) only tight enough that the gate with the operator can still be turned easily.

Installing the control unit

! **CAUTION: DANGER OF DESTRUCTION BY MOISTURE**
Penetration of moisture may destroy the control unit.

- Only screw the housing on the intended fixing points.
- Install the housing vertically with the cable conduits facing downwards.
- Permitted cross-section of cable conduits: 1.5 mm² to 2.5 mm². If cable cross-sections are smaller, insert bushing adapters into the cable conduits.
- Place the cover so it sits flush.

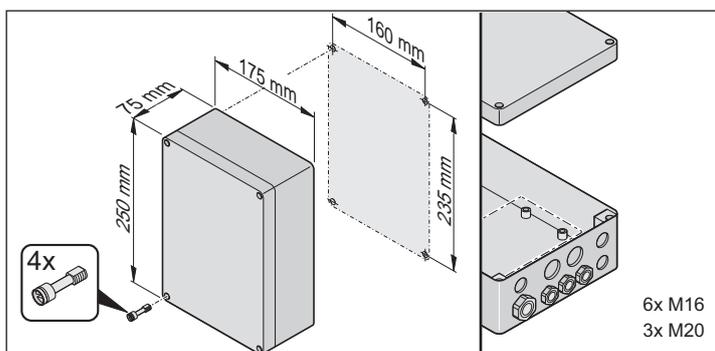

Connecting control unit to power mains (AC 230 V)

! **CAUTION! DANGER OF ELECTROCUTION!**
The control unit must be connected to the power mains by an electrician.

- Implement the mains connection according to EN 12453 (all-pole line disconnecter).
- Before doing any work on the gate or operator, disconnect it from the power supply and lock it to prevent reconnection.

! **CAUTION!**
The supplied mains cable is not approved for constant or outdoor operation.

- Only use this power cord for the mounting and commissioning of the operators.
- After completion of installation and commissioning: Replace power cord with a permanently laid line.



i **IMPORTANT INFORMATION!**
In order to maintain the functionality of the technical equipment, we recommend that you observe the specified maximum lengths and minimum cross-sections for power cables!

Connection lines	Signal lines
Maximum length 20 m	Maximum length 25 m
Minimum cross-section 1.5 mm ²	

Approved wire cross sections for all terminals:
1 mm²–2.5 mm².

i **IMPORTANT INFORMATION!**


- Do not remove the sheath of the supply line until it is in the housing!
- Insert the sheath of the connecting line into the control unit housing.
- Remove the line sheaths as shown in the graphic.

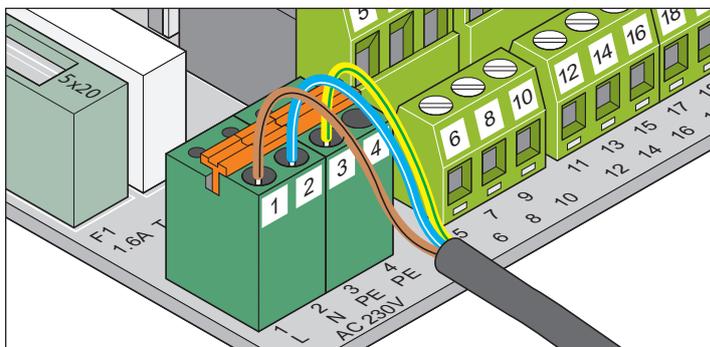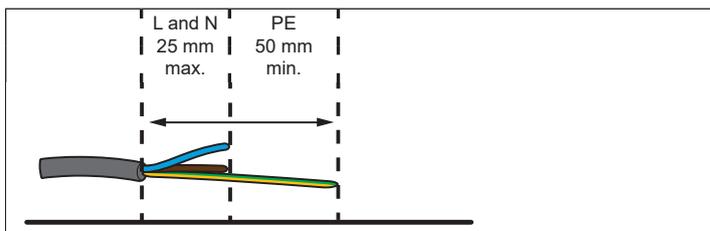

Terminal	Description	Description
1	L1	Outer conductor AC 230 V
2	N	Neutral wire
3 + 4	PE	Protective earthing conductor

i **IMPORTANT INFORMATION!**
Secure the line from being moved with cable binders!

Installation

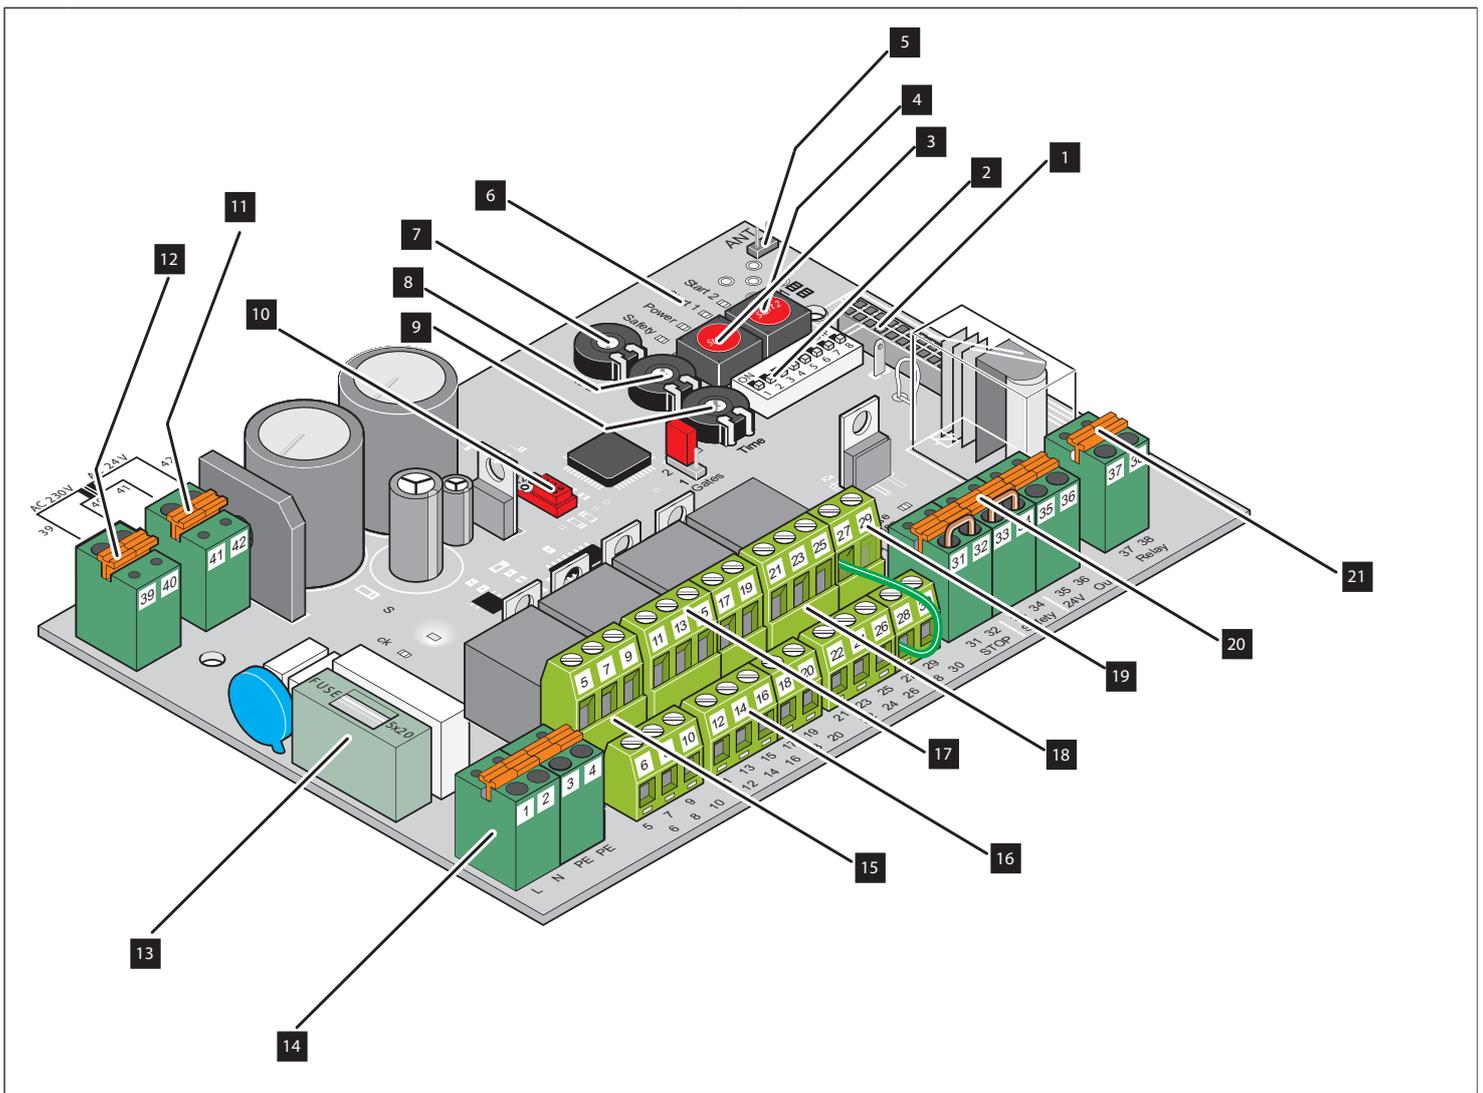

- | | | | |
|-----|---|-----|------------------------------|
| 1. | Radio connector | 12. | Primary transformer |
| 2. | DIP switches | 13. | Fuse 1.6 A, slow-acting |
| 3. | Button (Start 1) | 14. | Mains connection |
| 4. | Button (Start 2) | 15. | Connection for accessories |
| 5. | Connection of the external antenna | 16. | Motor 1 (M1) connection |
| 6. | LEDs (Start 1, Start 2, Power, Safety) | 17. | Motor 2 (M2) connection |
| 7. | Potentiometer (Gate 2) for force tolerance of Motor 2 (M2) | 18. | Button connection |
| 8. | Potentiometer (Gate 1) for gate leaf length of Motor 1 (M1) | 19. | LEDs (limit switch) |
| 9. | Potentiometer (Time) for automatic closing function | 20. | Safety device connection |
| 10. | TorMinal interface | 21. | Potential-free relay contact |
| 11. | Secondary transformer | | |

Installation


Connecting operator to control unit

CAUTION! DANGER OF ELECTROCUTION!
 Before doing any work on the gate or operator, disconnect it from the power supply and lock it to prevent reconnection.
 The operator is only correctly detected by the control unit after connection in a de-energised state.

CAUTION! DANGER OF ELECTROCUTION!
 Never connect the operator directly to the AC 230 V mains power. Risk of deadly electric shock!


IMPORTANT INFORMATION!
 Observe jumper setting for 1- and 2-leaf gate systems!

1-leaf gate

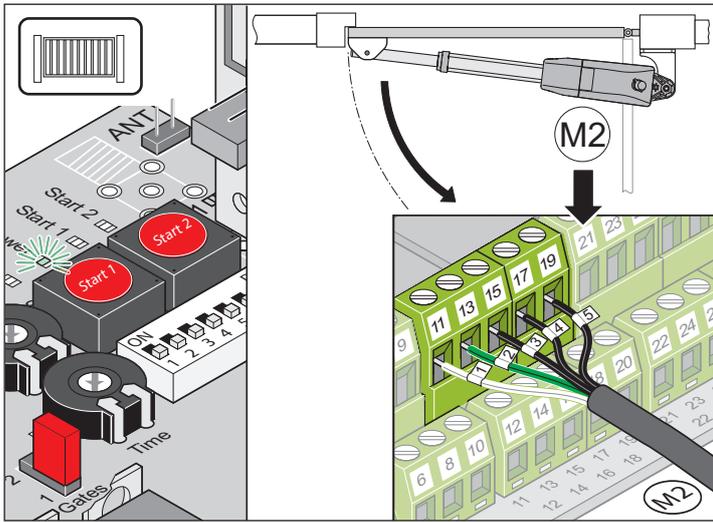


Terminal	Description	Description
11	1	Motor 2 (M2) connection
13	2	
15	3	Gate CLOSE limit switch
17	4	Gate OPEN limit switch
19	5	GND limit switch

2-leaf gate

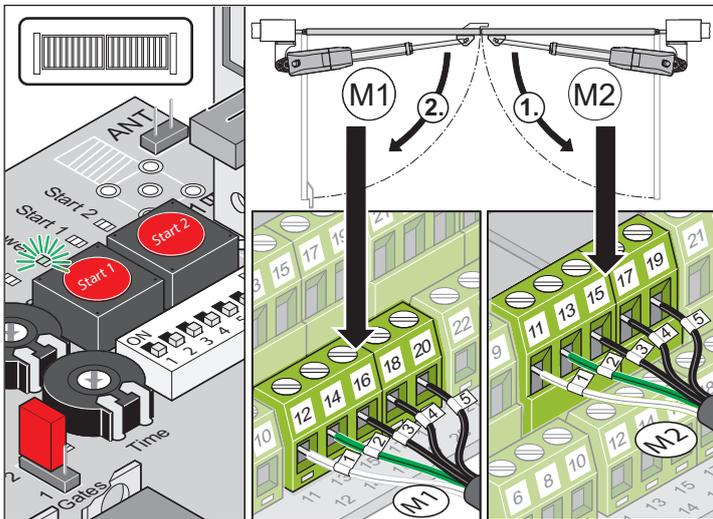


Terminal	Description	Description
12	1	Motor 1 (M1) connection
14	2	Gate leaf with stop opens last.
16	3	Gate CLOSE limit switch
18	4	Gate OPEN limit switch
20	5	GND gate limit switch
11	1	Motor 2 (M2) connection
13	2	Active leaf opens first.
15	3	Gate CLOSE limit switch
17	4	Gate OPEN limit switch
19	5	GND gate limit switch

1. Connect and set inactive leaf Motor 1 (M1).
 (Inactive leaf: gate leaf which opens second and closes first)
2. Connect and set active leaf motor 2 (M2) on control unit.
 (Active leaf: gate leaf which opens first and closes second)

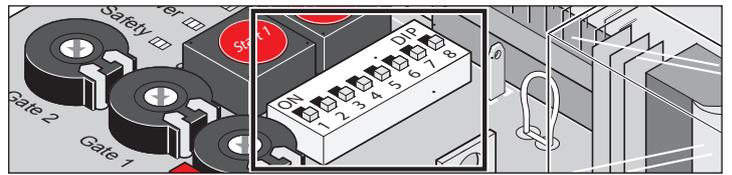

3. Set all DIP switches to "OFF" (factory setting).

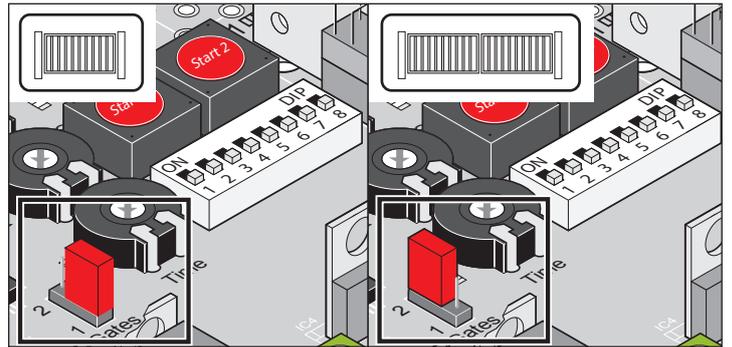

4. Set jumpers: Set 1- or 2-leaf gate.
5. Connect control unit to the power supply.
 - ⇒ "Power" LED on
 - ⇒ "Status" LED flashes
 - ⇒ LEDs for the limit switches ("Limit 1 open" LED, "Limit 1 close" LED, "Limit 2 open" LED and "Limit 2 close" LED) on or off (depending on whether the push rod is extended or retracted).


Installation

Installation situation: “Opening gate outwards”



IMPORTANT INFORMATION!

The gate post fittings in the diagram below are examples of fittings. These fittings must be manufactured individually by a door builder or metalworker, depending on the size of the gate and the posts.

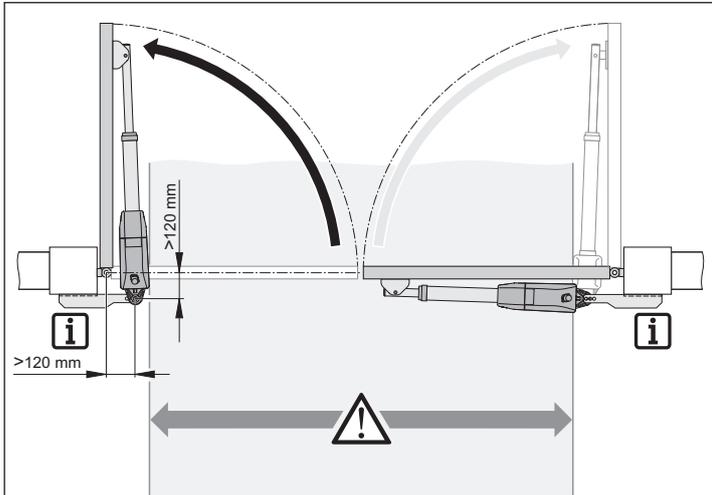

CAUTION!


Depending on the installation situation, the operators protrude roughly 180 mm per side into the drive-through and reduce the drive-through width.

- Swapping A/B dimensions:
A dimensions = B dimension in the A/B dimension table.
B dimensions = A dimension in the A/B dimension table.
- Set post and pillar fittings according to A/B dimensions.



IMPORTANT INFORMATION!

In the case of this “opening gate outwards” installation situation, the connection deviates from the standard connection. Observe the following connection diagram!

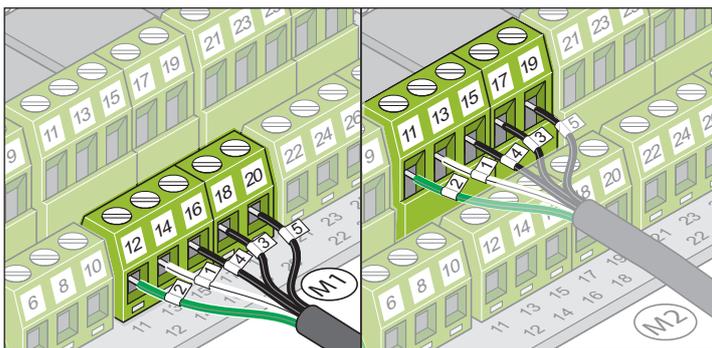

1-leaf gate

Terminal	Description	Description
11	2	Motor 2 (M2) connection
13	1	
15	4	Gate CLOSE limit switch
17	3	Gate OPEN limit switch
19	5	GND gate limit switch

2-leaf gate

Terminal	Description	Description
12	2	Motor 1 (M1) connection
14	1	Gate leaf with stop opens last.
16	4	Gate OPEN limit switch
18	3	Gate CLOSE limit switch
20	5	GND gate limit switch
11	2	Motor 2 (M2) connection
13	1	Active leaf opens first.
15	4	Gate OPEN limit switch
17	3	Gate CLOSE limit switch
19	5	GND gate limit switch

Installation

Adjust end positions


CAUTION! DANGER OF ELECTROCUTION!
Before doing any work on the gate or operator, disconnect it from the power supply and lock it to prevent reconnection.

CAUTION! DANGER OF ELECTROCUTION!
Never connect the operator directly to the AC 230 V mains power. Risk of deadly electric shock!

CAUTION!
Adjusting the limit switches with a battery-powered screwdriver or similar tool destroys the limit switches.
• Use recommended tools.

CAUTION!
Connecting cables can jam when adjusting the limit switches in the protective tube.
• Insert and bundle the connecting cables after adjustment to prevent individual wires from pinching in the housing.

i **IMPORTANT INFORMATION!**
1 revolution = 1.25 mm adjustment path when adjusting the limit switch.

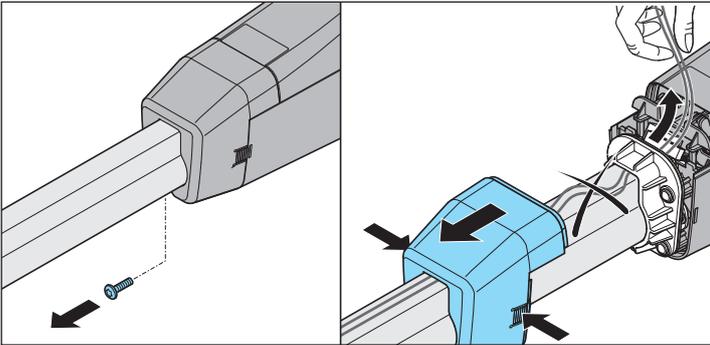


i **IMPORTANT INFORMATION!**
When Motor 1 is not connected, the “Limit 1 open” and “Limit 1 close” LEDs light constantly.


i **IMPORTANT INFORMATION!**
Setting the end positions achieves the following:

- The operator has maximum rigidity in the “Gate CLOSE” end position.
- The maximum possible path is fully used.
- Only one limit switch must be set to the “Gate CLOSE” end position.

1. Setting “Gate OPEN” end position

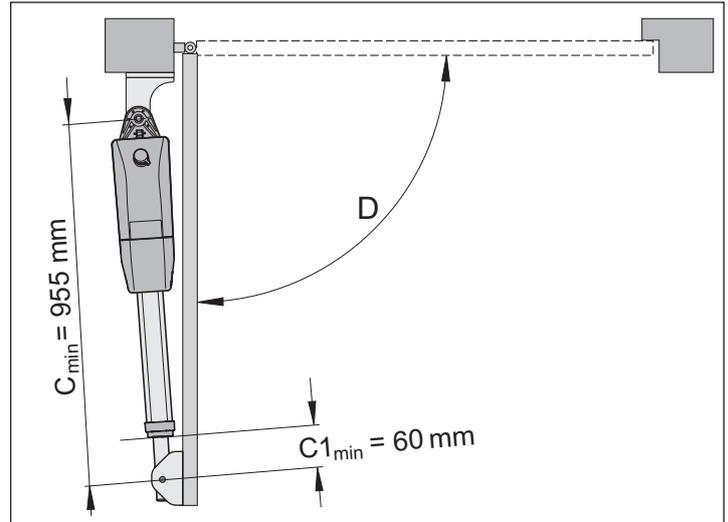


i **IMPORTANT INFORMATION!**
“Gate OPEN” end position preset to $C1_{min}$.

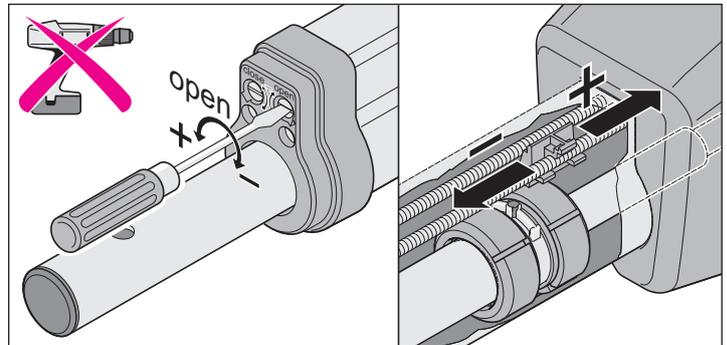

If necessary, readjust end position with a screwdriver.


- Extending travel length: Turn “open” setscrew in (+) direction.
- Reducing travel length: Turn “open” setscrew in (-) direction.

i **IMPORTANT INFORMATION!**
When the switching point of the limit switch is reached, the “Limit 1 open” or “Limit 2 open” LED is on.

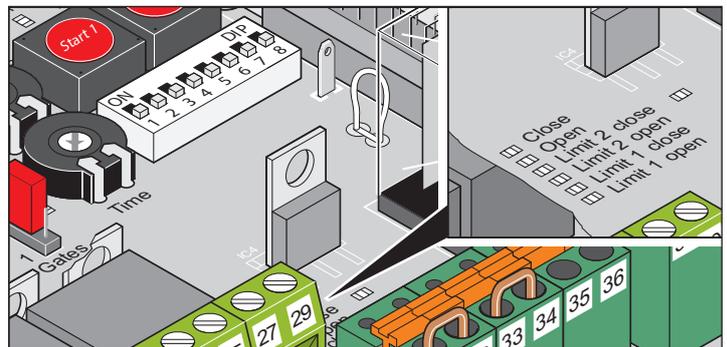


Installation

2. Setting "Gate CLOSE" end position

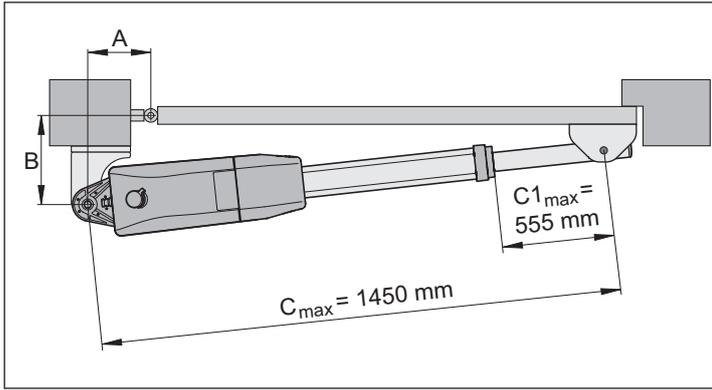


i **IMPORTANT INFORMATION!**
 "Gate CLOSE" end position preset to $C1_{max}$
 Do not exceed maximum values: $C1_{max}$ and C_{max}

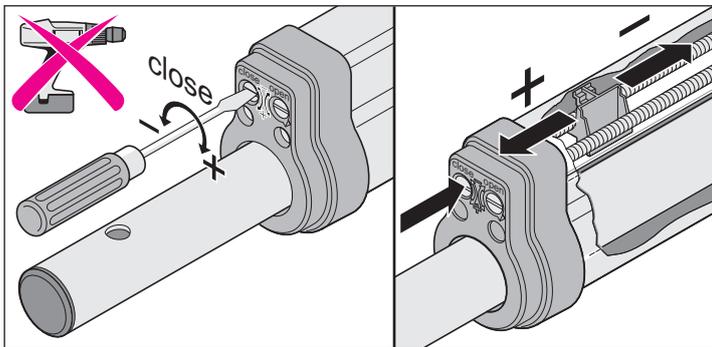

If necessary, readjust end position with a screwdriver.

- Extending travel length: Turn "close" setscrew in (+) direction.
- Reducing travel length: Turn "close" setscrew in (-) direction.

i **IMPORTANT INFORMATION!**
 When the switching point of the limit switch is reached, the "Limit 1 close" or "Limit 2 close" LED lights.

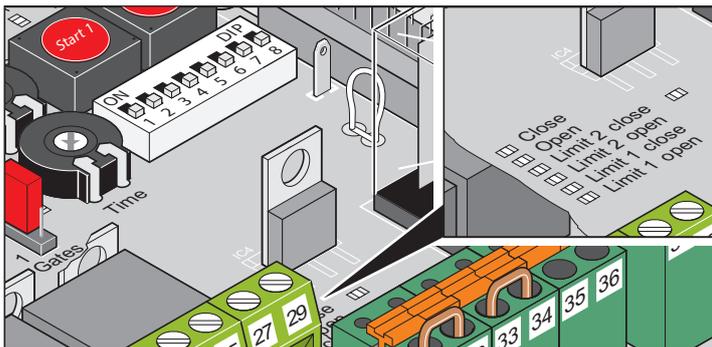


Locking and unlocking the operator

! **CAUTION!**
 Before doing any work on the gate or operator, disconnect it from the power supply and lock it to prevent reconnection.

i **IMPORTANT INFORMATION!**
 The emergency release lever can only be adjusted with application of force and it engages noticeably.

In the event of a power failure, the gate can be moved by hand after unlocking.

Unlocking operator

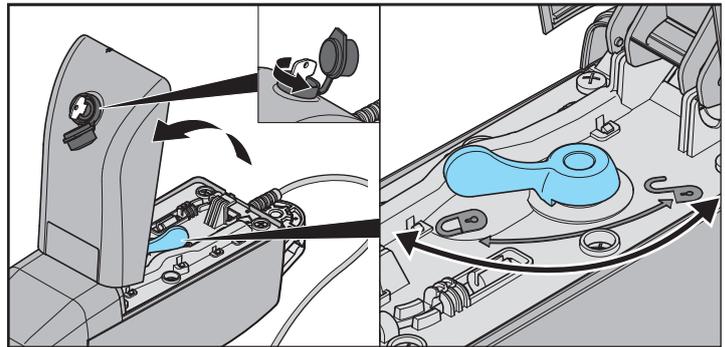

1. Raise the dust cap.
2. Insert the key and turn it 90° to the left.
3. Open the cover.
4. Set the emergency release lever to the "open" position.
5. Close the cover.
6. Turn key clockwise 90° and remove it.
7. Position the dust cap.
 ⇒ The gate can now be moved by hand.

Lock operator

1. Raise the dust cap.
2. Insert the key and turn it 90° to the left.
3. Open the cover.
4. Set the emergency release lever to the "closed" position.
5. Close the cover.
6. Turn key clockwise 90° and remove it.
7. Position the dust cap.
 ⇒ The gate can now only be moved using the operator

Initial operation

Safety instructions



CAUTION!

After installation of the operator, the person responsible for the installation must complete an EC declaration of conformity for the gate system in accordance with Machinery Directive 2006/42/EC and apply the CE mark and a type plate. This is also required for private installations and also if the operator is retrofitted to a manually operated gate. This documentation and the installation and operating manual are retained by the operator.



CAUTION!

The adjustment of the force tolerance is safety-relevant and must be performed by qualified personnel with the utmost care. If the adjustment of the spring unit is excessively high, people or animals could be injured and objects damaged. Select a force tolerance that is as low as possible so that obstacles are detected quickly and safely.



CAUTION!

Always perform learning run under supervision, because the operators traverse at full power. This is dangerous for persons, animals and object within the range of motion of the gates.



CAUTION!

Before working on the gate or the operator always disconnect the control unit from the power supply and lock to prevent reactivation.

- “Status” LED and a connected warning light (accessory) flash during the learning run and as a visual warning at standstill.
- In the commissioning process the force required for opening and closing, the runtime and the closing delay are learned and saved by the control unit.

Preparing continuous operation




IMPORTANT INFORMATION!

Do not use a metal object to set the DIP switches, because this may damage the DIP switches or the pcb. The DIP switches can be set with a narrow, flat plastic object.

- Components for 1- or 2-leaf gate are connected and set, see “Functions and connections”.
 - Mains power is connected and voltage (AC 230 V) is present at control unit: “Power” LED on.
 - The fittings bolts are tightened, operators can be moved easily.
1. Lock operator and connect with padlock.
 2. Close the gate.
 3. Check jumper setting for 1- or 2-leaf operation (see “Jumper” chapter).

Adjusting the gate leaf length

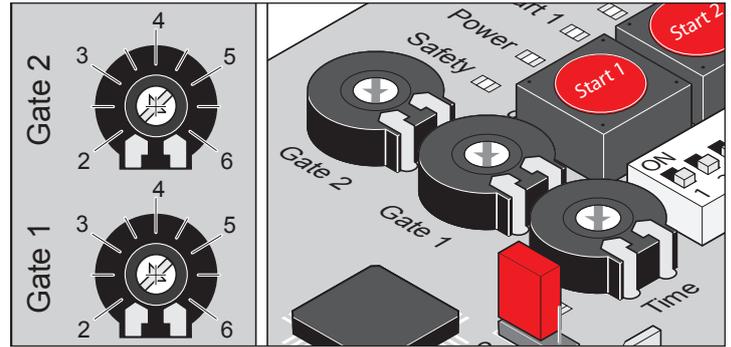

Setting	Gate leaf length	Description
2	approx. 2 m	Small gate <ul style="list-style-type: none"> • High speed • Low force value
3.5	approx. 3.5 m	Large gate <ul style="list-style-type: none"> • Low speed • High force value
3.5 to 6		Compensation of influences by A and B dimensions

Changing gate leaf length after programming the operator

1. Reset the control unit*.
2. Set the gate leaf length*.
3. Perform learning run*.

* See corresponding chapter

Enabling continuous operation

- “Status” LED flashes until the force values, runtimes, and closing delays are learned and saved.



IMPORTANT INFORMATION!

2-leaf gate close sequence

- **Motor 1 (M1) on the gate leaf with the stop closes first.**
- **Motor 2 (M2) on the active leaf closes last.**

1. Check the setting of the limit switches.
2. Open and close gate.
3. If the operator switches off correctly at both end positions: Perform learning run.

Initial operation


Performing learning run



CAUTION!


Always perform learning run under supervision, because the operators traverse at full power. This is dangerous for persons, animals and object within the range of motion of the gates.

1. Lock the operator, see "Locking and unlocking the operator".

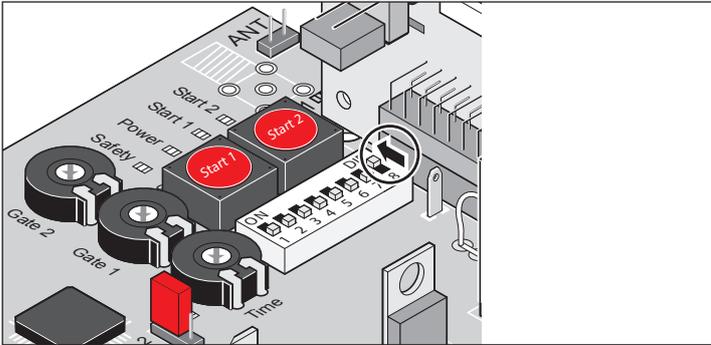

2. Set DIP switch 8 to ON.

- Connect the DIP switch during the learning run and leave it in this position during normal operation.

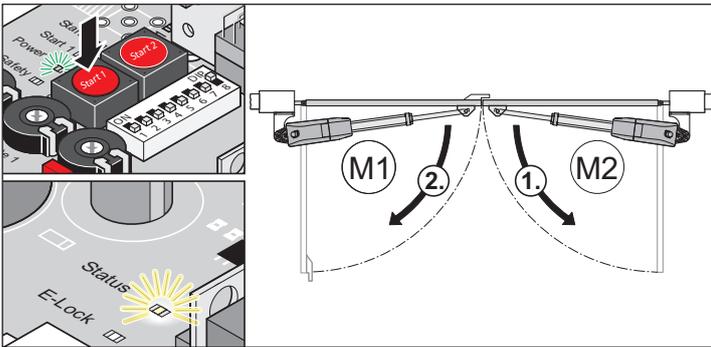


IMPORTANT INFORMATION!

Checking direction of running: After the first command, the operator must traverse in the "Gate OPEN" direction. If the operator moves to the "Gate CLOSE" position, reverse the operator connector cable on the control unit (see chapter "Connecting operator to the control unit").

3. Press button (Start 1).

- ⇒ Operators move into the "Gate OPEN" end position.
- ⇒ "POWER" LED lights, "Status" LED flashes.

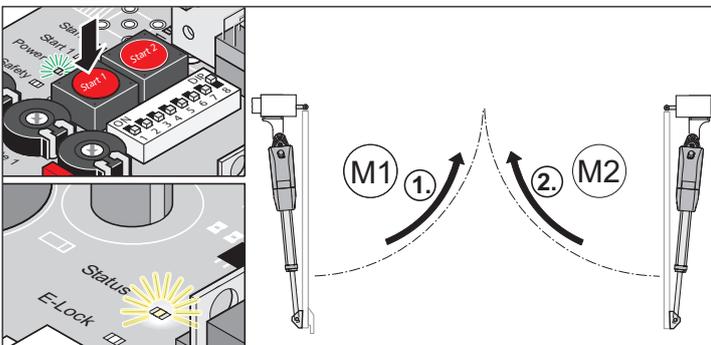

4. Press button (Start 1).

- ⇒ Operators move into the "Gate CLOSE" end position.
- ⇒ "POWER" LED lights, "Status" LED flashes.

5. Repeat steps 3 and 4.

- ⇒ When all values are programmed, the "Status" LED flashes.

6. Give the next command.

- ⇒ The operators are started and stopped with soft running. Every time the gates are opened, the control unit monitors the force, runtime, and closing delay and adjusts them incrementally when the end position is reached.


7. Leave DIP switch 8 "ON".

Detecting faulty learning runs

- Operators run without soft running.
 - "Status" LED flashes in both end positions.
1. Reset the control unit.
 2. Perform learning run.

Resetting the control unit

The control unit reset deletes all learnt values (e.g. force values: force required by operator to open or close the gate, closing delay).

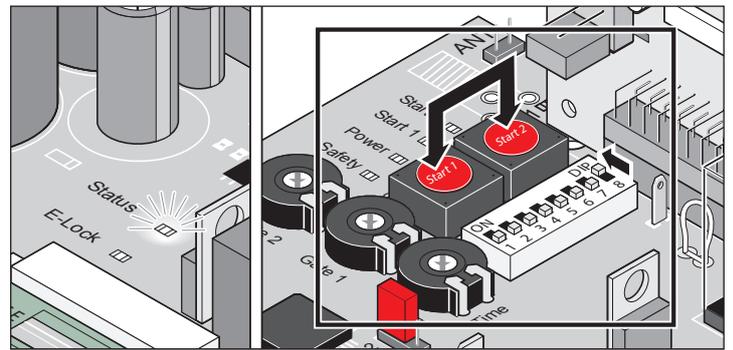

1. Press and hold the button (Start 1 + Start 2).
 - ⇒ The "Status" LED flashes.
 - ⇒ "Status" LED goes out after approx. 5 seconds.
 - ⇒ All values deleted.
2. Release button.
 - ⇒ The "Status" LED flashes.
 - ⇒ Clicking of relays can be heard.
3. Perform learning run.

Initial operation


Radio receiver



HOMELINK-COMPATIBLE!

If your vehicle is equipped with a HomeLink system (Version 7), our operator and radio receiver with 868.8 MHz are compatible. Another radio frequency (40.685 or 434.42 MHz) must be used with older HomeLink systems. For information see: <http://www.eurohomelink.com>

Display and button explanation

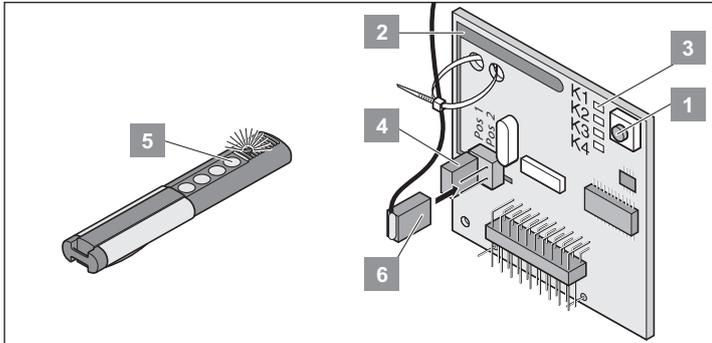

No.	Description
1	Teach-in button
2	internal antenna
3	LED: shows selected channel <ul style="list-style-type: none">• K1 = radio channel 1 -> same function as "Start 1" button*• K2 = radio channel 2 -> same function as "Start 2" button*• ! K3 = channel 3 -> no function• ! K4 = radio channel 4 -> no function
4	Connection of the external antenna
5	Transmitter button
6	External antenna

* See chapter "Opening and closing gate".



IMPORTANT INFORMATION!

Before programming transmitters: Delete the radio receiver memory.

Deleting the radio receiver memory

- If a hand-held transmitter is lost, all transmitters in the radio receiver must be deleted for security reasons! After that, reprogram all hand-held transmitters in the radio receiver.

1. Press and hold the Teach-in button (1).
 - ⇒ After 5 seconds, the LED flashes – after another 10 seconds, the LED is steady.
 - ⇒ After a total of 25 seconds, all LEDs light.
2. Release the Teach-in button (1).
 - ⇒ All LEDs go off – memory clearing process complete.

Programming transmitter

1-leaf gate

- Button 1 on radio channel 1

2-leaf gate

- Button 1 on radio channel 1 (both gate leaves open)
- Button 2 on radio channel 2 (only the active leaf opens)

1. Press the Teach-in button (1):
 - 1 x for channel 1; LED "K1" lights.
 - 2 x for channel 2; LED "K2" lights.

2. Press one of the transmitter buttons (5).
 - ⇒ The transmitter has sent the radio code to the radio receiver.
 - ⇒ LED flashes during programming.
 - ⇒ When the radio code has been programmed, the LED goes out.
3. Cancelling the teach-in mode: Press the Teach-in button (1) several times until no more LEDs are lit.



IMPORTANT INFORMATION!

If no radio code is sent within 10 seconds, the radio receiver switches to normal operation.

Control

1. Press button 2.
 - ⇒ Only the active leaf opens.
2. Press button 1.
 - ⇒ Both gate leaves open.
3. Programming additional transmitters: Repeat "Programming transmitter".
 - The radio receiver can save a maximum of 112 different radio codes (transmitter buttons).
 - If a user moves a mutually used gate unit and also takes the transmitter, all radio codes of the transmitter must be deleted from the radio receiver.

Deleting radio code

1. Press Teach-in button (1) and keep it pressed for 5 seconds.
 - ⇒ LED "K1" or "K2" flashes.
2. Release the Teach-in button (1).
 - ⇒ The radio receiver is in Deletion mode.
3. Press the transmitter button of the radio code.
 - ⇒ LED off – wipe procedure complete.

Deleting all radio codes of a channel

1. Press Teach-in button (1) and keep it pressed for 5 seconds.
 - 1x for channel 1
 - 2x channel 2
 - ⇒ The channel LED flashes.
2. Keep the Teach-in button (1) pressed for another 10 seconds.
 - ⇒ The channel LED lights up.
3. Release the Teach-in button (1) – the deletion procedure is ended.

Troubleshooting

All LEDs flashing

- All 112 memory slots of the radio receiver are occupied. If additional transmitters are to be programmed, delete radio codes from the radio receiver.



LED on

- Learn mode: radio receiver is waiting for a radio code from a hand-held transmitter.
- radio receiver is receiving a radio code from a hand-held transmitter.

Initial operation

Connecting external antenna

- Attach a strain relief on the antenna cable to prevent mechanical stresses on the radio receiver.
- If the range of the internal antenna is insufficient, connect external antennas.
- Attach connecting cables of the external antenna.
- Define the installation location together with the operator.

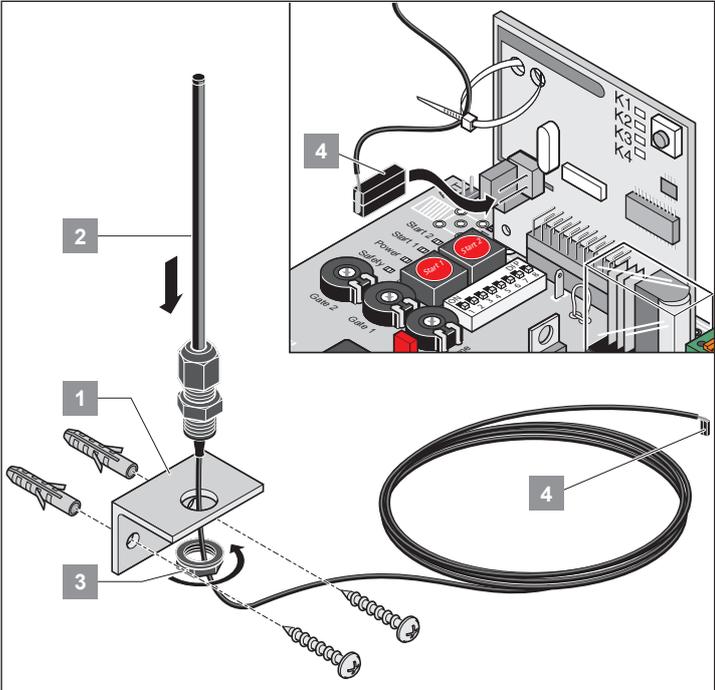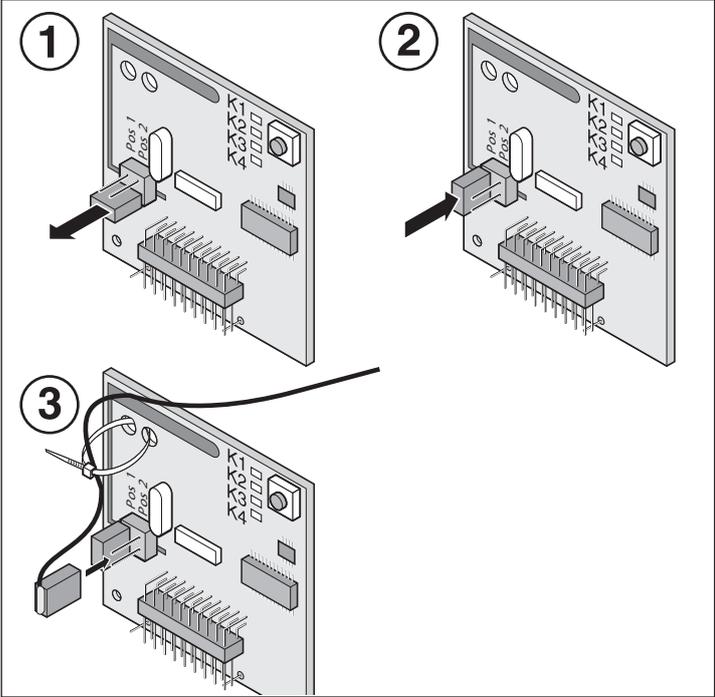

Safety instructions

- Never operate a damaged operator.
- During opening or closing, no children, people, animals, or objects may be in the range of movement of the gate.
- Do not operate the hand-held transmitter in areas with sensitive radio communications or systems (e.g. airports, hospitals, etc.).
- Actuate the gate system by remote control only if you have a clear view of the gate.
- Store the hand-held transmitter so that unintended operation, e.g., by children or animals, is impossible.
- Use the radio remote control only if a non-hazardous force tolerance is set. Set the force tolerance low enough to eliminate any danger of injury by the closing force.

Emergency release in case of power failure

See "Locking and unlocking the operator".

Normal mode

Changes to the gate affect the force needed for opening and closing.

Examples for changes to the gate:

- Damage
- Moisture absorption
- Ground submergence
- Changes in weather in summer-winter mode
- Obstacles

Obstacle detection



IMPORTANT INFORMATION!

Obstacle detection requires a correctly completed learning run.

A tolerance for the force required for opening or closing can be set on the potentiometer.

- If the force required increases or decreases within the set tolerance, the control unit automatically learns this value.
- If the force required is outside the set tolerance (e.g. due to an obstacle), the operator stops and reverses a short distance. This power deactivation with reverse is required for safety.

Summer-winter mode

Differences in weather between summer and winter can influence the operators:

- The force required varies for opening and closing.
- The gate reverses without a noticeable obstacle.
- The end positions of the gate leaf change.

If the gate will not open or close or reverses without a noticeable obstacle:

1. Perform a control unit reset, see "Resetting the control unit"
2. Perform a learning run, see "Performing learning run"


If the end positions have changed:

1. Adjust limit switch.

Opening and closing gate

Requirements

- DIP switch 8 to ON.
- Learning run performed.
- Transmitter programmed: Button 1 to channel K1, button 2 on channel K2.

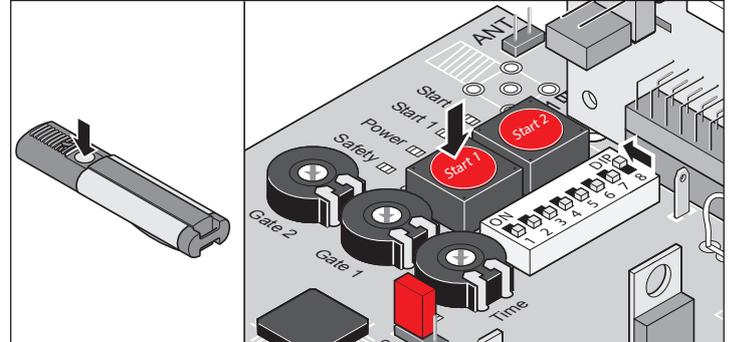

1-leaf gate

1. Press button (Start 1) or transmitter button (Button 1).
 - ⇒ Gate opens
 - ⇒ LED "Limit 1 open" and "Limit 1 close" on
 - LED "Open" and "Status" on
 - ⇒ "Gate OPEN" end position reached
 - LED "Limit 2 open", "Limit 1 open" and "Limit 1 close" on
 - LED "Open" and "Status" go out
2. Press button (Start 1) or transmitter button (Button 1).
 - ⇒ Gate closes
 - LED "Limit 1 open" and "Limit 1 close" on
 - LED "Close" and "Status" on.
 - ⇒ "Gate CLOSE" end position reached
 - LED "Limit 2 open", "Limit 1 open" and "Limit 1 close" on
 - LED "Close" and "Status" go out.

2-leaf gate – both gate leaves

1. Press button (Start 1) or transmitter button (Button 1).
 - ⇒ Active leaf opens
 - ⇒ Gate leaf with stop opens with a delay of approximately 3 seconds
 - LED "Open" and "Status" on.
 - ⇒ "Gate OPEN" end position reached
 - LED "Limit 1 open" and "Limit 2 open" on
 - LED "Open" and "Status" go out
2. Press button (Start 1) or transmitter button (Button 1).
 - ⇒ Gate leaf with stop closes
 - ⇒ Active leaf closes with a delay or simultaneously (depending on installation situation)
 - LED "Close" and "Status" on.
 - ⇒ "Gate CLOSE" end position reached
 - LED "Limit 1 close" and "Limit 2 close" on.
 - LED "Close" and "Status" go out.

2-leaf gate – only active leaf

1. Press button (Start 2) or transmitter button (button 2).
 - ⇒ Gate opens to end position
 - LED "Open", "Status" and "Limit 1 close" on
 - ⇒ "Gate CLOSE" end position reached
 - LED "Limit 2 open" and "Limit 1 close" on
 - LED "Open" and "Status" go out
2. Press button (Start 2) or transmitter button (button 2).
 - ⇒ Gate closes
 - LED "Close", "Status" and "Limit 1 close" on
 - ⇒ "Gate CLOSE" end position reached
 - LED "Limit 1 close" and "Limit 2 close" on.
 - LED "Close" and "Status" go out.

Functions and connections


Safety instructions

➤ Observe cable requirements:

Property	Value	Terminals
Cross-section	0.25–2.5 mm ²	All terminals
Maximum length	10 m	5 to 10 35 + 36
Maximum length	30 m	21 to 34

Jumper

Select 1- or 2-leaf gate.

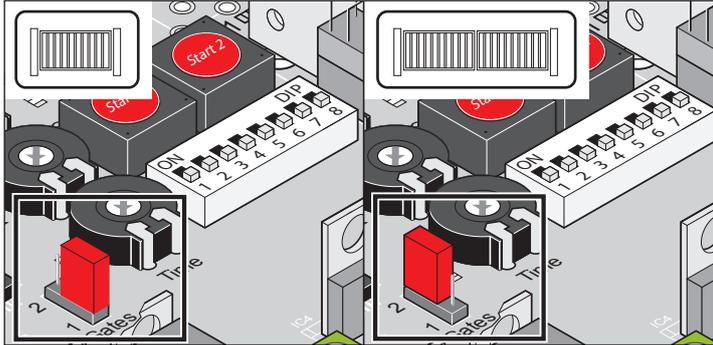


Label	Description
Gates 1/2	1 leaf: Jumper on bottom pins or removed
	2-leaf: Jumper on top pins

Setting 1- or 2-leaf gate (jumper)

1. Reset the control unit.
2. Replug jumpers.
3. Reset the control unit.
4. Perform learning run.

Button on control unit

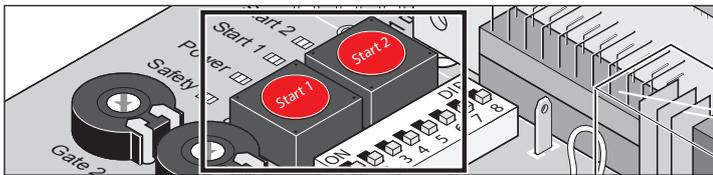

Label	Description
Start 1	Pulse button <ul style="list-style-type: none"> • opens both gate leaves. • Stops moving active leaf • Active leaf open: Opens gate leaf with stop • Function sequence: Open – Stop – Close – Stop – Open ...
Start 2	Active leaf button <ul style="list-style-type: none"> • Opens active leaf • Function sequence: Open – Stop – Close – Stop – Open ...




IMPORTANT INFORMATION!

Button (Start 2) operates only if the gate leaf with stop is fully closed.

Potentiometer for gate leaf length

- Maximum force = learnt force + force tolerance (depending on the gate leaf length. This is set on the “Gate 1 (M1)/Gate 2 (M2)” potentiometer).
- Changes to the setting after configuring the operator are not taken into account. First reset the control unit, reconfigure the potentiometer and repeat the learning procedure.

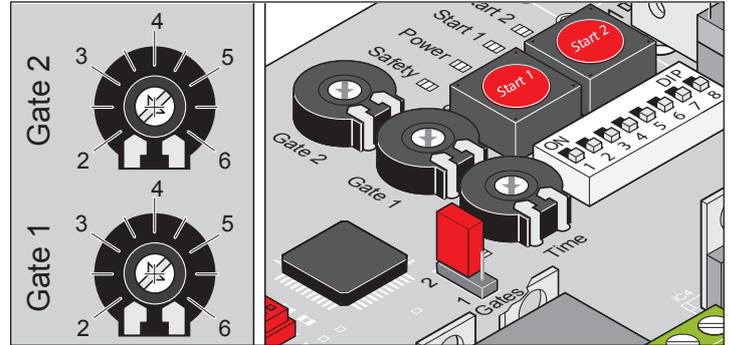


The length of the gate leaf is set at the control unit with the “Gate 1 (M1) + Gate 2 (M2)” potentiometers. The speed of movement and the force tolerance for the separate leaves of the gate installation are determined based on this setting.

- Setting 2 = gate leaf length approx. 2 m (small gate -> high speed -> lower force tolerance)
- Setting 3.5 = gate leaf length approx. 3.5 m (large gate -> low speed -> higher force tolerance)
- Setting 3.5–6 = for compensation of the influences through the A and B dimensions.


Radio connector

Slot for radio receiver. Installed on delivery.

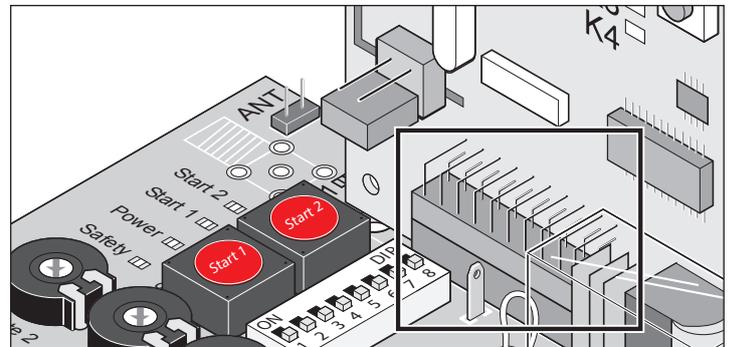

TorMinal interface


See TorMinal installation and operating manual

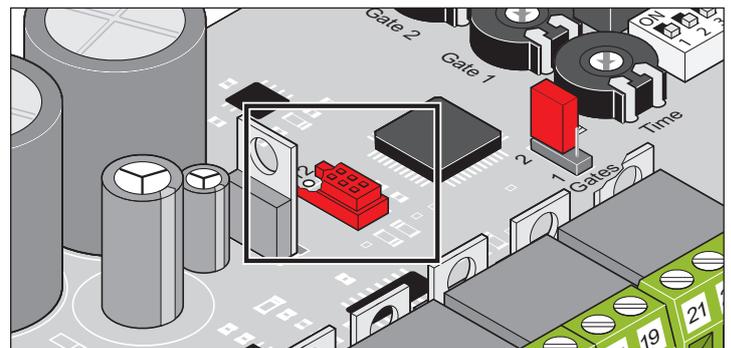

Functions and connections

Light-emitting diodes (LED)

Shows the status of the control unit.

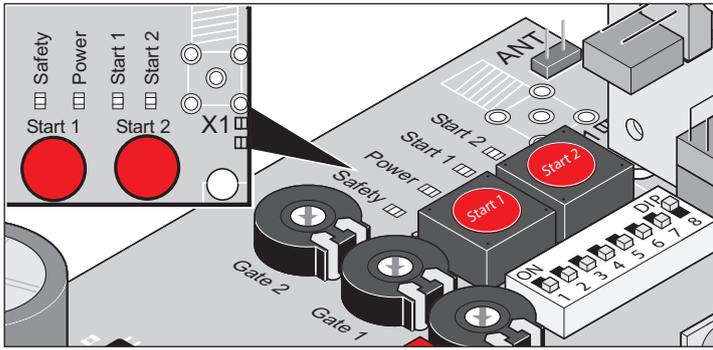

Label	Colour	Status	Description
Safety	Red	Off	Idle mode
		On	Safety input interrupted (e.g. photo eye triggered)




CAUTION! DANGER OF ELECTROCUTION!

If the fuse is burnt out, the "Power" LED will not be on although the mains voltage (AC 230 V) is present on the control unit.

- Before doing any work on the gate or operator, disconnect it from the power supply and lock it to prevent reconnection.

Label	Colour	Status	Description
Power	Green	Off	Power supply interrupted
		On	Mains voltage present
Start 1	Yellow	Off	Idle mode
		On	Start 1 button/radio channel 1 actuated
Start 2	Yellow	Off	Idle mode
		On	Start 2 button/radio channel 2 actuated

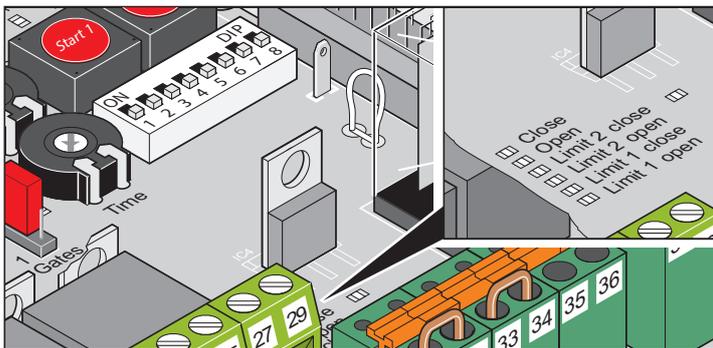

IMPORTANT INFORMATION!

If both LEDs are on (LED "Limit 2 close" and "Limit 2 open" or "Limit 1 close" and "Limit 1 open"), either no motor is connected or an impermissible operator is connected. See "Mixed operation".

Label	Colour	Status	Description
Close	Yellow	Off	Idle mode
		On	Gate closes
Open	Yellow	Off	Idle mode
		On	Gate opens
Limit 2 close (CLOSE) (M 2)	Red	Off	Idle mode
		On	<ul style="list-style-type: none"> • "Gate CLOSE" limit switch actuated • Impermissible mixed operation • No motor connected
Limit 2 open (AUF) (M 2)	Red	Off	Idle mode
		On	<ul style="list-style-type: none"> • "Gate OPEN" limit switch actuated • Impermissible mixed operation • No motor connected
Limit 1 close (M 1)	Red	Off	Idle mode
		On	<ul style="list-style-type: none"> • "Gate CLOSE" limit switch actuated • Impermissible mixed operation • No motor connected
Limit 1 open (M 1)	Red	Off	Idle mode
		On	<ul style="list-style-type: none"> • "Gate OPEN" limit switch actuated • Impermissible mixed operation • No motor connected

Functions and connections

Automatic closing function

There are two basic variants for automatic closing.

Every basic variant has sub-variants with other settings.


When both variants are activated at the same time, the fully automatic closing function has priority.

Fully automatic closing function

- The gate does not close until the set opening time has expired completely.
- Command via button or radio control system during closing.
 - ⇒ The gate completely opens.
- Command via button or radio control system while the SOT expires.
 - ⇒ SOT starts again.
- Continuous signal while the SOT expires:
 - ⇒ The SOT restarts as soon as the continuous signal ends.

Activating fully automatic operation

- Set SOT (2–120 seconds) on the “Time” potentiometer.

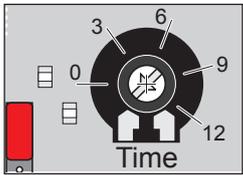

IMPORTANT INFORMATION!

After every power deactivation, the fully automatic closing function is deactivated.

Deactivating fully automatic operation

- Turn SOT on the “Time” potentiometer to the left stop.

Sub-variant 1

- Photo eye interrupted during closing:
 - ⇒ The gate completely opens (independent of DIP 3 position).
 - ⇒ Gate remains open until the photo cell is released.
 - ⇒ The SOT restarts as soon as the photo cell is released.

“Time” potentiometer	Sets the opening time.
DIP 7	OFF

Sub-variant 2

- Photo eye interrupted during opening:
 - ⇒ SOT is 5 seconds.
- Photo eye interrupted in “Gate OPEN” end position:
 - ⇒ SOT is 5 seconds.
- Photo eye interrupted during closing.
 - ⇒ The gate completely opens (independent of DIP 3 position).
 - ⇒ Gate remains open until the photo cell is released.
 - ⇒ SOT is 5 seconds.

“Time” potentiometer	Sets the opening time.
DIP 7	ON

Sub-variant 3

- Photo eye interrupted during opening:
 - ⇒ Gate stops until the photo cell is released.
 - ⇒ The SOT restarts as soon as the photo cell is released.
 - ⇒ DIP 7 position determines the SOT:
 - DIP 7 ON: SOT is 5 seconds.
 - DIP 7 OFF: SOT is the time set on the “Time” potentiometer.
- Photo eye interrupted during closing.
 - ⇒ The gate completely opens (independent of DIP 3 position).
 - ⇒ Gate remains open until the photo cell is released.
 - ⇒ The SOT restarts as soon as the photo cell is released.
 - ⇒ SOT is 5 seconds.


“Time” potentiometer	Sets the opening time.
DIP 7	ON (opening time of five seconds) OFF (SOT set on the “Time” potentiometer)

Semi-automatic closing function

- Command via button or radio control system while the SOT expires.
 - ⇒ Gate can be closed prematurely.
 - ⇒ SOT starts again.
- Continuous signal while the SOT expires:
 - ⇒ The SOT restarts as soon as the continuous signal ends.
- Photo eyes interrupted:
 - ⇒ SOT is 5 seconds.
- “Gate OPEN” end position reached:
 - ⇒ SOT is 60 seconds.
Factory setting, can only be changed with the TorMinal.

Activating semi-automatic closing

- Set DIP switch 7 to ON.

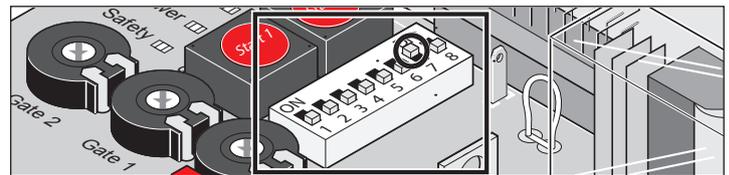

IMPORTANT INFORMATION!

If an intermediate position is approached in a targeted manner (using the button/radio command), the semi-automatic closing function is deactivated; i.e., after the photo eye is interrupted, the gate is no longer closes automatically.

After the next starting command, the semi-automatic closing function is active again.



IMPORTANT INFORMATION!

After every power cut-off, the semi-automatic closing function is deactivated.

Sub-variant 1

- Photo eye interrupted during opening:
 - ⇒ Gate opens until the “Gate OPEN” end position is reached.
 - ⇒ “Gate OPEN” end position reached:
 - ⇒ The SOT restarts as soon as the photo cell is released.
 - ⇒ SOT is 5 seconds.

Functions and connections

- Photo eye interrupted during closing:
 - ⇒ The gate completely opens (independent of DIP 3 position).
 - ⇒ Gate remains open until the photo cell is released.
 - ⇒ The SOT restarts as soon as the photo cell is released.
 - ⇒ SOT is 5 seconds.


"Time" potentiometer	Left stop (deactivated)
DIP 7	ON (opening time of five seconds)
DIP 1	OFF (no response to the triggering of the safety input with "Gate OPEN")

Sub-variant 2

- Photo eye interrupted during opening:
 - ⇒ Gate stops.
 - ⇒ The SOT restarts as soon as the photo cell is released.
 - ⇒ SOT is 5 seconds.
 - ⇒ The gate closes on expiration of the SOT.
- Photo eye interrupted during closing:
 - ⇒ The gate completely opens.
 - ⇒ Gate remains open until the photo cell is released.
 - ⇒ The SOT restarts as soon as the photo cell is released.
 - ⇒ SOT is 5 seconds.


"Time" potentiometer	Left stop (deactivated)
DIP 7	ON (opening time of five seconds)
DIP 1	ON (no response to the triggering of the safety input with "Gate OPEN")

Fuses

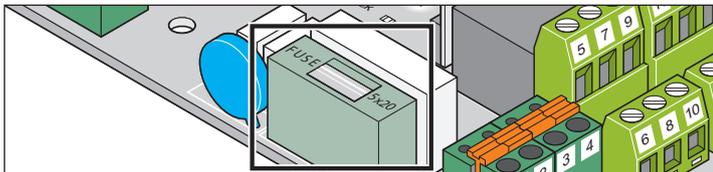

Label	Size	Description
F1	1.6 A, slow-acting	Mains supply line AC 230 V

Transformer terminal

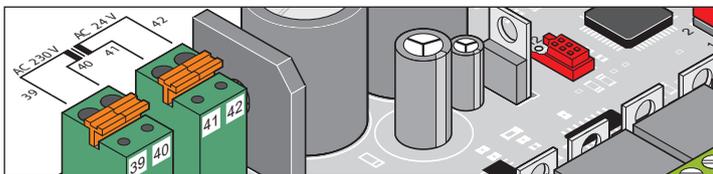


Terminal	Description	Description
39	AC 230 V	Outer conductor (input): brown/blue
40		
41	AC 24 V	Input (output): Supply line to control unit, red
42		

DC 24 V electric lock

- After installation, reset the "Gate CLOSE" end position.
- Uphold the distance between lock and strike: min. 4 mm and max. 6 mm.

- Note the polarity of the electric lock.


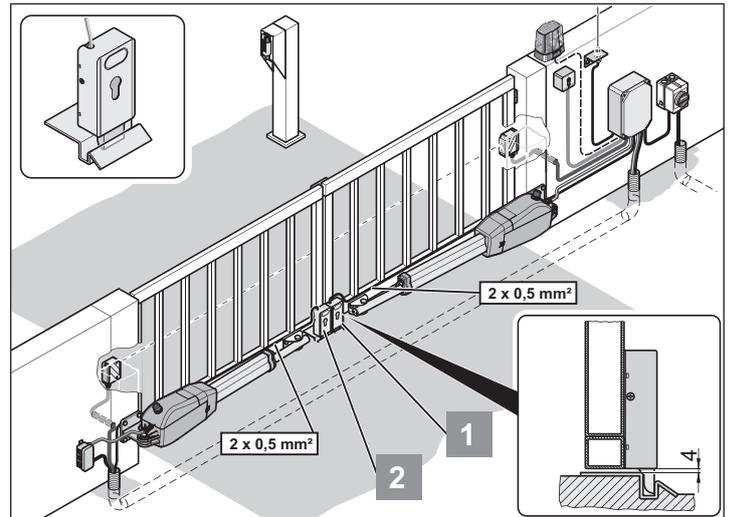


Connecting electric lock 1

Available as an accessory.

- Mount electric lock 1 on the gate leaf with stop.

i IMPORTANT INFORMATION!
The electric lock is operated with direct-current, unregulated transformer voltage. The transformer voltage can fluctuate between DC 22–32 V when fully loaded.

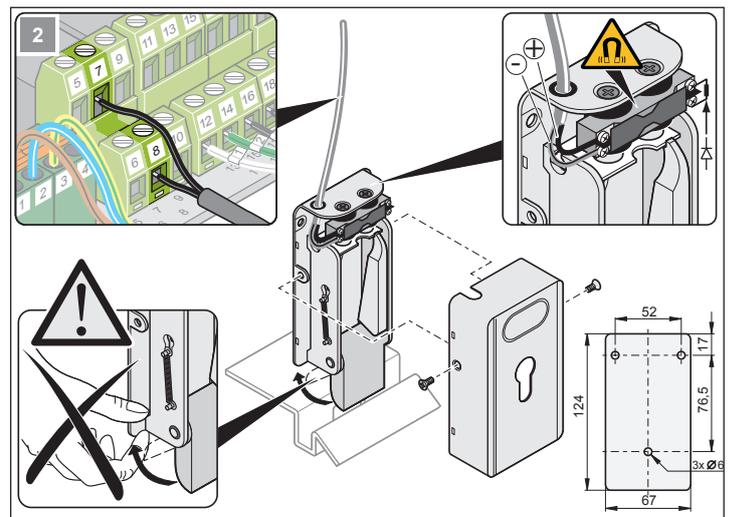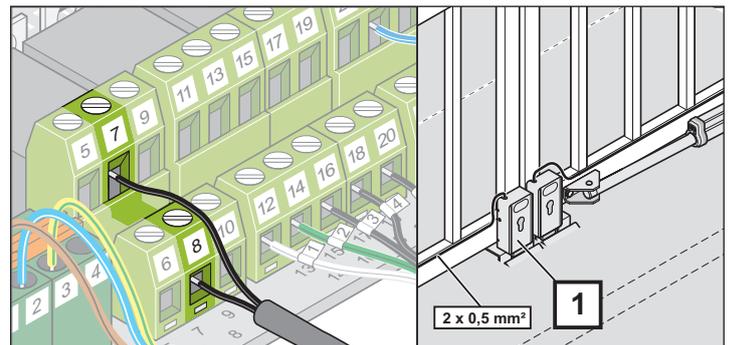

Terminal	Description	Description
7	DC 24V	Connection for DC 24 V electric lock with max. 15 W power (unstabilised DC 22–32 V).
8		

Functions and connections

Connect electric lock 2



Available as an accessory.

- Mount electric lock 2 on the active leaf.



IMPORTANT INFORMATION!

The electric lock is operated with direct-current, unregulated transformer voltage. The transformer voltage can fluctuate between DC 22–32 V when fully loaded.

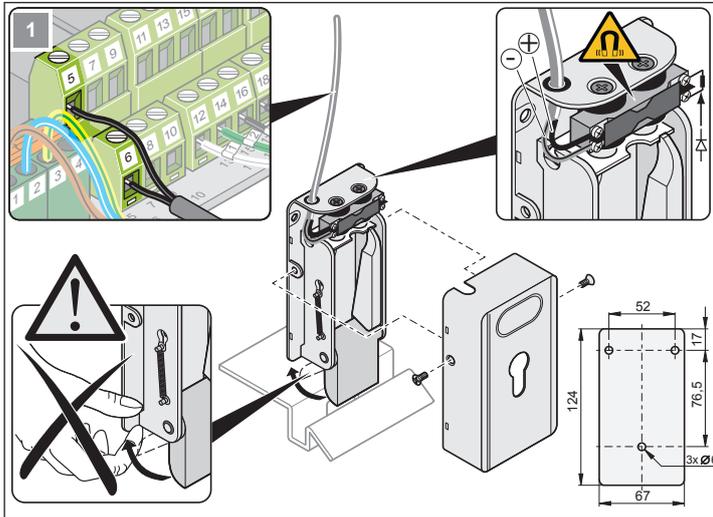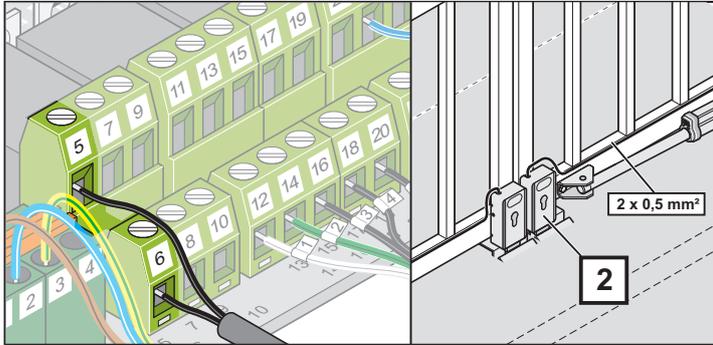

Terminal	Description	Description
5	DC 24V	Connection for DC 24 V electric lock with max. 15 W power (unstabilised DC 22–32 V).
6		


Connecting warning light

Available as an accessory.



IMPORTANT INFORMATION!

The warning light is operated with direct-current, unregulated transformer voltage. The transformer voltage can fluctuate between DC 22–32 V when fully loaded.

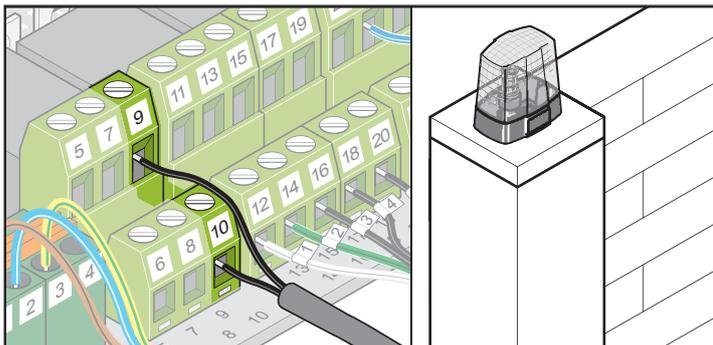

Setting the function, see "DIP switch DIP 5"

Continuous light on is programmable with TorMinal.

Terminal	Description	Description
9	DC 24V	Connection for DC 24 V warning light with max. 24 W power (unstabilised DC 22–32 V).
10		


Connecting button

Pulse sequence: OPEN-STOP-CLOSE



CAUTION!

Only use the connection for potential-free closer contacts. External voltage can trigger severe power surges and damage or destroy the control unit.

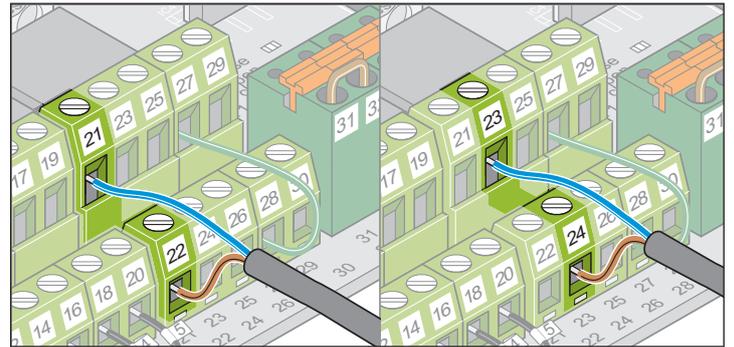

Terminal	Description	Description
21	GND	Connection for pulse transmitter for actuating one or both leaves.
22	Signal	
23	GND	Connection for pulse transmitter for actuating the active leaf.
24	Signal	

- 1-leaf gate: Start 1 and Start 2 buttons have the same function.
- 2-leaf gate: Button 2 contact is needed for the active leaf function.

Button 1 contact

- 1-leaf gate: Buttons at terminals 21 + 22 or 23 + 24
- 2-leaf gate: Buttons at terminals 21 + 22

Button 2 contact


- Active leaf terminal 23 + 24
- Both gate leaves 21 + 22

Functions and connections

Connecting key switch


CAUTION!
When actuating the key switch the operator must keep clear of the movement zone of gate and must have a direct view of it.

- Never lay the cable of the key switch along a power line to prevent control unit faults.
- Permanently install the switch cable.
- Install key switch at an accessible position.

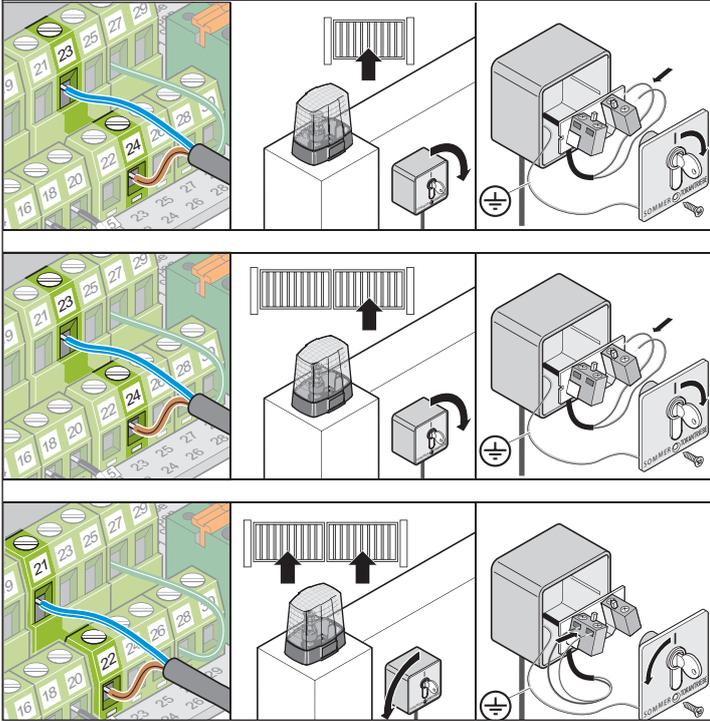

Connecting button (defined opening)


CAUTION!
Only use the connection for potential-free closer contacts. External voltage can trigger severe power surges and damage or destroy the control unit.

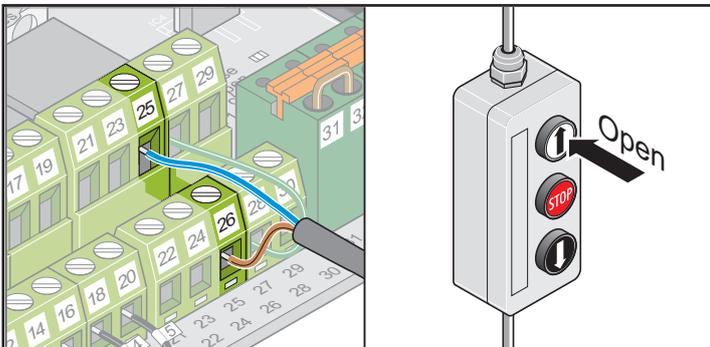

Terminal	Description	Description
25	GND	Connection for pulse transmitter for actuating one or both leaves, "Gate OPEN" only.
26	Signal	

Connecting button (gate STOP)

CAUTION!
Only use the connection for potential-free NC contacts. External voltage can trigger severe power surges and damage or destroy the control unit.

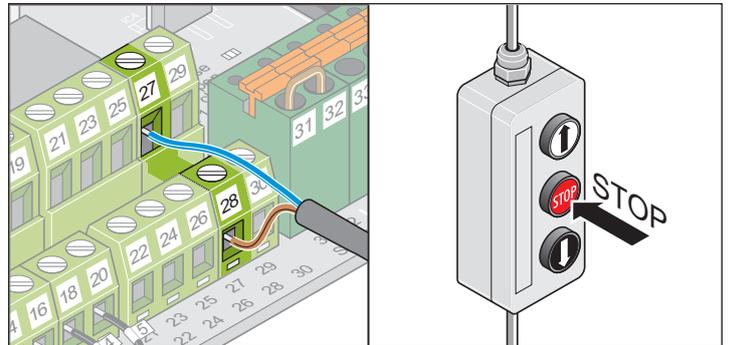


Remove wire bridge before connection.

Terminal	Description	Description
27	Signal	Connection for pulse transmitter for actuating one or both leaves, "Gate STOP" only.
28		

Connecting button (defined closing)

CAUTION!
Only use the connection for potential-free closer contacts. External voltage can trigger severe power surges and damage or destroy the control unit.

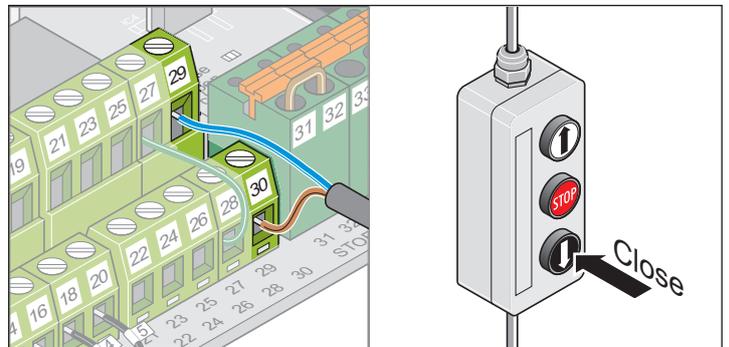

Terminal	Description	Description
29	GND	Connection for pulse transmitter for actuating one or both leaves, "Gate CLOSE" only.
30	Signal	


Functions and connections

Connecting EMERGENCY STOP



CAUTION!

Only use the connection for potential-free NC contacts. External voltage can trigger severe power surges and damage or destroy the control unit.

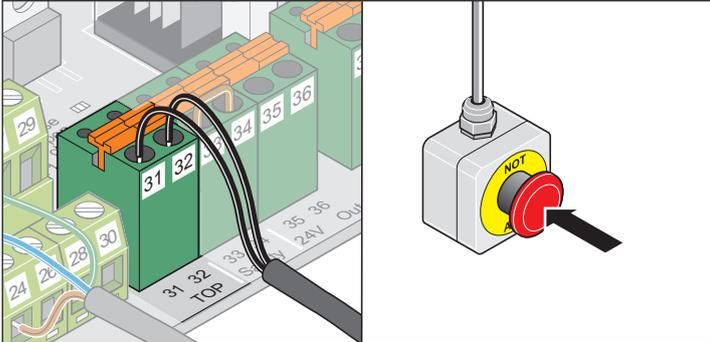

Remove wire bridge before connection.

Terminal	Description	Description
31	Signal	EMERGENCY STOP interrupts all control unit functions, including dead man operation.
32		

Connecting 2-wire photo eye

Available as an accessory.



CAUTION!

Only use the connection for potential-free NC contacts. External voltage can trigger severe power surges and damage or destroy the control unit.




IMPORTANT INFORMATION!

When using the automatic closing function, ensure compliance with standard EN 12453 (e.g. install photo eye).

As-delivered status: Jumper between terminals 33 + 34

Remove wire bridge before connection.

DIP switch 2 "ON"

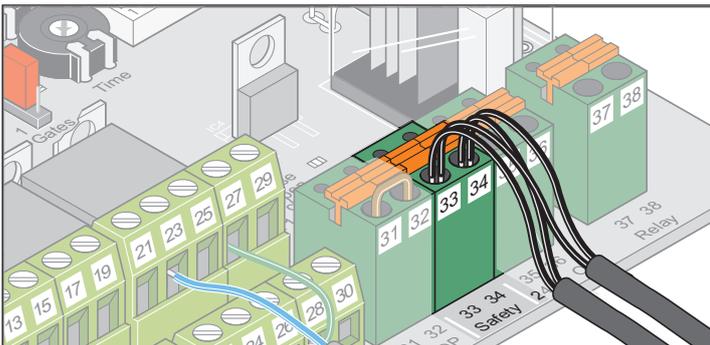

Terminal	Description	Description
33	GND	Connection of 2-wire photo eyes (polarity-protected). If the connection is not used, install a jumper between the terminals (delivery status).
34	Signal	

Connecting 4-wire photo eye

Available as an accessory.



CAUTION!

Only use the connection for potential-free NC contacts. External voltage can trigger severe power surges and damage or destroy the control unit.




IMPORTANT INFORMATION!

When using the automatic closing function, ensure compliance with standard EN 12453 (e.g. install photo eye).

As-delivered status: Jumper between terminals 33 + 34

Remove wire bridge before connection.


DIP switch 2 "OFF".

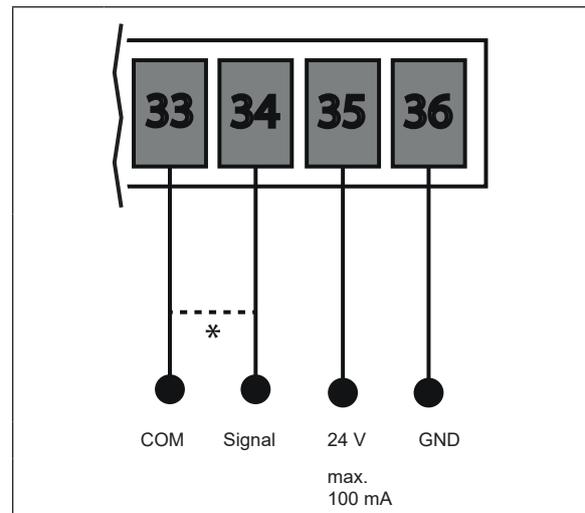

Terminal	Description	Description
33	GND	Safety device connection • Photo eye If the connection is not used, install a jumper between the terminals (delivery status).
34	Signal	
35	DC 24 V max. 100 mA	DC 24 V output, max. 100 mA Photo eye power supply for transmitter and receptor
36	GND	


Functions and connections

Connecting external consumers

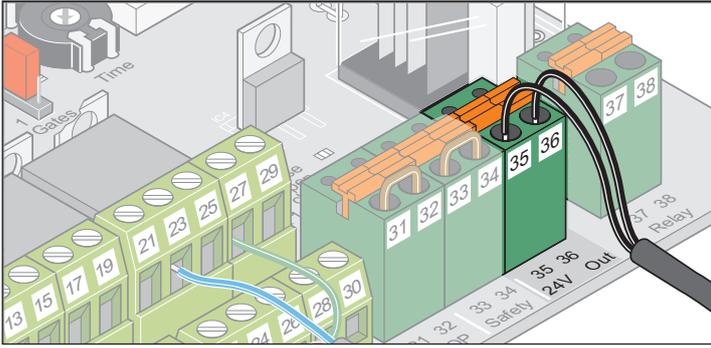


Terminal	Description	Description
35	DC 24 V max. 100 mA	DC 24 V output, max. 100 mA
36	GND	

Connecting potential-free relay contact

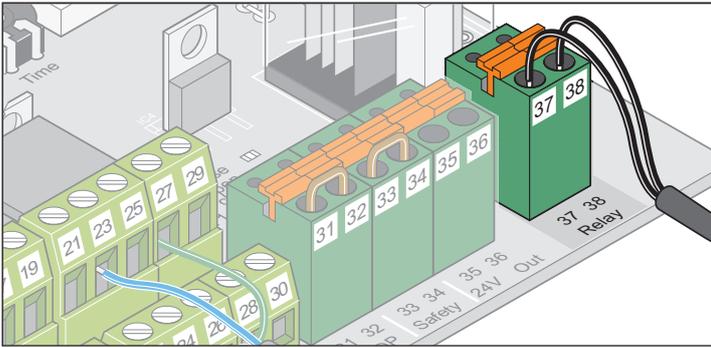


Terminal	Description	Description
37	Potential-free relay contact	Connection, e.g. light, max. AC/DC 24 V.
38		

Connecting motor

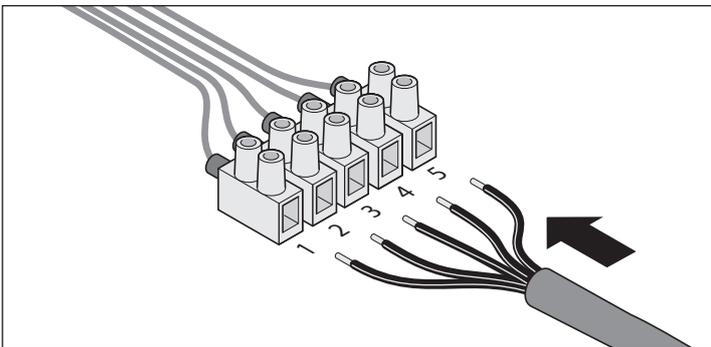


Cable number	Cable colour	Description
1	White	Motor
2	Green	Motor
3	Blue	"Gate CLOSE" limit switch
4	Yellow	"Gate OPEN" limit switch
5	Blue + yellow	Earth "Gate OPEN" +and "Gate CLOSE" limit switch

Attaching connecting cable set

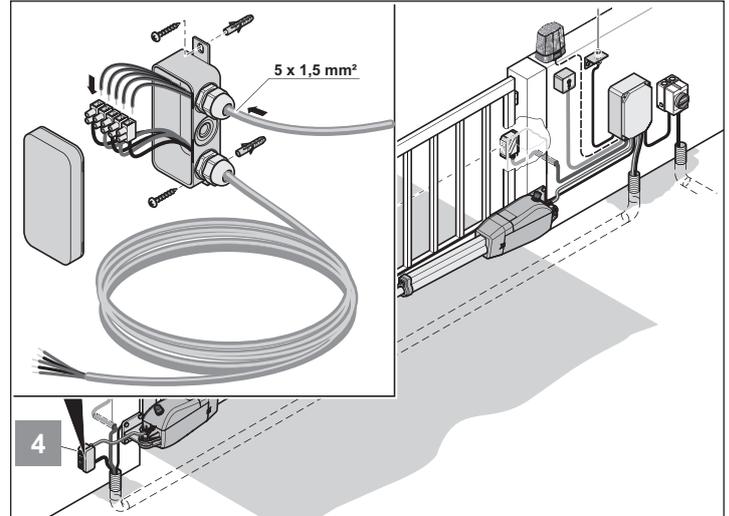

1. Fasten terminal box with screws through the eyelets.
2. Connect cable with the same number:
 - 1 : 1
 - 2 : 2
 - etc.
3. Tighten PG fasteners well to prevent ingress of moisture into the terminal box.
4. Close terminal box.

Main switch

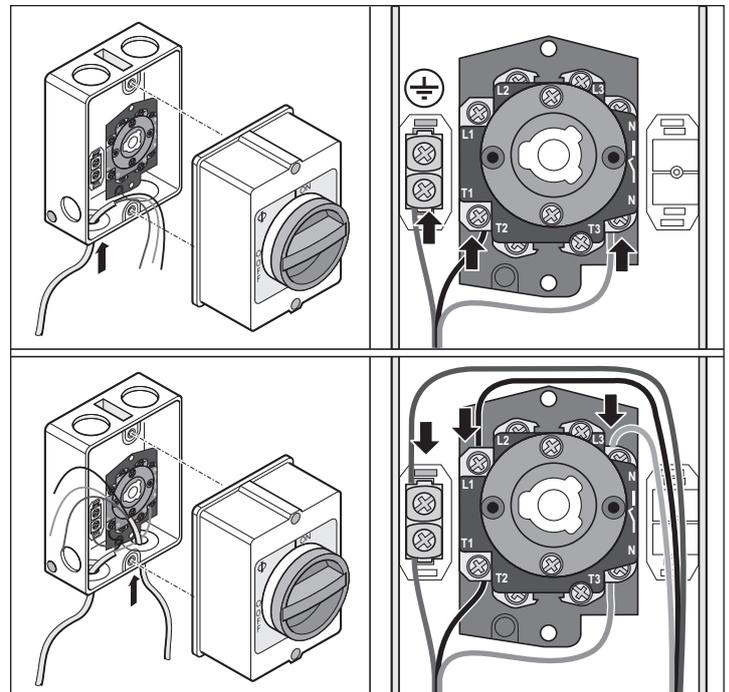

Maintenance and care

Safety instructions



DANGER!

Never use a water hose or high-pressure cleaner to spray down the operator or the control unit housing.

- Do not use acids or alkalis for cleaning.
- Keep operator clean and clean the push rod with a dry cloth when needed.
- Check the control unit housing regularly for insect infestation and clean if necessary.
- Check the control unit housing regularly for moisture and dry if necessary.
- Check that all screws and bolts of the fittings are tightened. Retighten loose fixing bolts.
- Check that the connection control unit housing cover is free of leaks.

Regular testing

Check the function of the safety devices at least every 6 months. See EN 12453:2000.

Check the function of the pressure-sensitive safety devices at least every 4 weeks. Example: Safety contact strip with separate evaluation unit. See EN EN 60335-2-95:11-2005.

Testing	Behaviour	Yes or No	Possible cause	Remedy
Force cut-off				
Stop the gate leaf by hand while it is closing. Do not clutch the gate leaf.	Does the gate stop and reverse when lightly held?	Yes		No action necessary.
		No	Force tolerance too high.	Reducing force tolerance: <ul style="list-style-type: none"> • Open and close the gate completely twice under supervision. • Rotate the "Gate 1" or "Gate 2" potentiometer completely to the left until the test is successful.
			Control unit defective.	<ul style="list-style-type: none"> • Decommission the gate and lock it to prevent reactivation. • Call customer service!
Emergency release				
Procedure as described under "Locking and unlocking operator".	Can the gate be opened and closed easily by hand? Can the operator be unlocked?	Yes		No action necessary.
		No	Hinges rusted.	Lubricate gate hinges.
Safety contact strip, if present				
Open/close the gate and actuate the strip.	Does the gate behave as set with DIP switch 1, 2 or 3?	Yes		No action necessary.
		No	Cable broken.	<ul style="list-style-type: none"> • Check wiring. • Replace broken cables.
			Terminal loose.	Tighten terminal.
			DIP switch adjusted.	Set the DIP switch.
	Safety contact strip defective. Safety contact strip evaluation unit defective.	<ul style="list-style-type: none"> • Decommission the gate and lock it to prevent reactivation. • Call customer service! 		
Photo eye, if present				
Open/close the gate and interrupt photo eye.	Does the gate behave as set with DIP switch 1, 2 or 3? "Safety" LED on?	Yes		No action necessary.
		No	Cable broken.	<ul style="list-style-type: none"> • Check wiring. • Replace broken cables.
			Terminal loose.	Tighten terminals.
			DIP switch adjusted.	Set the DIP switch.
			Photo eye soiled.	Clean the photo relay.
Photo relay fault.	<ul style="list-style-type: none"> • Decommission the gate and lock it to prevent reactivation. • Call customer service! 			

Disassembly



IMPORTANT!

Observe the safety notices!

See "Safety instructions", page 3.

The sequence is identical to that described in the "Mounting" section, but in reverse order. Ignore the setting instructions.

Disposal

Observe applicable national regulations.

Warranty and customer service

The warranty complies with statutory requirements. Please contact your specialist retailer/supplier if you have any queries regarding the warranty.

The warranty is only valid in the country in which the product was purchased.

Batteries, fuses and bulbs are excluded from the warranty.

Ownership of replaced parts passes to us.

If you require after-sales service, spare parts or accessories, please contact your specialist retailer/supplier.

We have tried to make the assembly and operating manual as easy as possible to follow. If you have any suggestions as to how we could improve it or if you think more information is needed, please send your suggestions to us:



+49 (0) 7021 8001-403



doku@sommer.eu

Troubleshooting

Tips on troubleshooting

Fault	Control	Yes or No	Possible cause	Remedy
Gate cannot be opened or closed with buttons or hand-held transmitter.	"Power" LED on?	No	No supply voltage.	<ul style="list-style-type: none"> • Check connection. • Establish missing connection.
			Fuse defective.	<ul style="list-style-type: none"> • Check fuse. • Replace defective fuse.
		Yes	Gate jammed. Gate leaf has sunk or distorted because of high temperature variations.	Fix misaligned gate leaves.
			Motor hums but does not move.	<ul style="list-style-type: none"> • Switch off immediately! Possible motor or control unit fault. • Contact customer service.
			Operator unlocked.	Lock operator.
			Cable does not have a contact.	Check the cable connection.
			Gate frozen.	Clear snow and ice from gate and hinges.
Snow is blocking the movement zone of gate.	Clear snow.			
Is the LED on the transmitter on?	No	Battery flat.	Replace battery.	
		Battery incorrectly inserted.	Insert battery correctly.	
		Hand-held transmitter defective.	Replace the hand-held transmitter.	
	Yes	Range of the transmitter too short due to weak battery.	Replace battery.	
		Radio receiver defective.	Replace radio receiver.	
		Transmitter not programmed.	Program transmitter.	
		Poor reception.	Install external antenna, see "Accessories"	
Incorrect frequency.	<ul style="list-style-type: none"> • Check frequency. • Check that transmitter and radio receiver are on the same frequency. 			
Does an LED on the radio receiver come on if a button on the transmitter is pressed?	No	Radio receiver not properly plugged in.	Plug in radio receiver properly.	
		Radio receiver defective.	Replace radio receiver.	
		Radio receiver without power supply.	Replace radio receiver.	
		Transmitter not programmed.	Program transmitter.	
Is the "POWER + OPEN/CLOSE" LED on?	Yes	Continuous signal pending. Pulse generator defective.	<ul style="list-style-type: none"> • Check pulse generator. • Replace defective pulse generator. 	
"POWER + Safety" LED on?	Yes	Photo eye interrupted.*	Remove interruption.	
Does the fault occur intermittently or for a short time?	Yes	Very powerful public address systems in hospitals or industrial areas may interfere with the radio control system.	<ul style="list-style-type: none"> • Change radio frequency. • Contact source of interference. 	
Does "Safety" LED flash quickly?	Yes	The control unit has stored faulty values (e.g. due to a short power failure).	<ul style="list-style-type: none"> • Reset the control unit. • Reprogram the operator. • If not possible, call customer service. 	

Troubleshooting

Fault	Control	Yes or No	Possible cause	Remedy
Gate cannot be opened or closed with a connected key switch.	"POWER + Start 1/Start 2" LEDs on?	Yes	Cable connections interrupted?.	Tighten terminal.
			Key switch defective.	Replace key switch.
			Permanent contact due to damaged wire insulation.	<ul style="list-style-type: none"> • Check wiring. • Replace damaged cables.
Gate remains stationary and reverses during opening and closing.	Is there an obstacle outside the range of motion?	No	Hinges stiff.	Lubricate hinges.
			Post or pillar has changed.	Align posts/pillars.
			Limit switch out of adjustment.	Adjust limit switch.
	Yes	Power deactivation tripped.	Remove obstacle.	
Does the gate leaf vibrate when moving?	Yes	Gate leaf unstable.	Reinforce gate leaf.	
	Yes	Wind pressure too strong.	Open and close gate again.	
Gate remains stopped when opening.	Photo eyes interrupted?	Yes	Obstacle in light beam.	Remove obstacle.
			Photo eye soiled.	Clean the photo relay.
		No	Connection for external consumers overloaded (terminals 35 + 36). Voltage drop when operator starts.	<ul style="list-style-type: none"> • Observe maximum connection power. • Only connect suitable tools.
Gate does not open or close completely.	Does the gate stop before the set end position?	No	Gate fittings not installed correctly.	Change the gate bracket.
		Yes	Limit switch incorrectly adjusted.	Adjust limit switch.
Closing sequence incorrect.			Operators incorrectly connected.	Connect operators as specified in the manual.
Operator does not learn the force values.			DIP switch 8 to OFF.	Set DIP switch 8 to ON.
Gate does not stop at an obstacle.			Gate in learning mode. DIP switch 8 to ON. Force tolerance too high.	<ul style="list-style-type: none"> • After learning mode the power cut-off responds. • Set DIP switch 8 to OFF. • Reduce force tolerance.
Operator stops at pillar.	Are the A/B dimensions correct?	No	A or B dimension not correct.	Adjust fastening of operator to post or pillar.
		Yes	Limit switch out of adjustment.	Adjust limit switch.
Gate moves unevenly.			A/B dimensions unequal.	Change installation dimension.
Active leaf does not open with transmitter.			Hand-held button not programmed.	Program button.
Operators do not start.	Does "Safety" LED flash quickly?	Yes	Jumper was moved with programmed force values.	<ul style="list-style-type: none"> • Place jumper in previous position. • Reset the control unit. • Replug jumpers. • Perform learning runs.

* If photo eyes are uninterrupted, the operator can be moved in dead man mode with the "Open" and "Close" buttons. If an obstacle is detected, power deactivation also occurs in this operating mode.

Additional support during troubleshooting

When the troubleshooting tips are not successful, take the following measures:

- Reset the control units (delete force values).
- Disconnect the connected accessories (e.g. photo eye) and use wire bridges again.
- Set all DIP switches to the factory setting.
- Turn potentiometer to the factory setting.
- If settings have been changed using TorMinal, perform the control unit reset with TorMinal.

Our dealers offer additional support during troubleshooting and elimination of faults.

DTA-1 control unit


DIP switch settings

Switch	Function in "OFF" setting	Function in "ON" setting	Comments
1	Response to triggering the safety input (terminals 33 + 34) while the gate opens: <ul style="list-style-type: none"> No response 	Response to triggering the safety input while the gate opens: <ul style="list-style-type: none"> Gate stops 	Terminals 33 + 34
2	Safety input setting: <ul style="list-style-type: none"> 4-wire photo eye normally closed contact 	Safety input setting: <ul style="list-style-type: none"> 2-wire photo relay 	Terminals 33 + 34
3	Response to triggering the safety input while the gate closes: <ul style="list-style-type: none"> Gate reverses 	Response to triggering the safety input while the gate closes: <ul style="list-style-type: none"> Gate opens completely Response to triggering the safety input when position DIP 1 = ON: <ul style="list-style-type: none"> Gate reverses and stops 	Terminals 33 + 34
4	Relay contact: <ul style="list-style-type: none"> Time relay 	Relay contact: <ul style="list-style-type: none"> Gate status display * For additional settings, see DIP 6 	<ul style="list-style-type: none"> Terminals 37 + 38 TorMinal Mem 022
5	Prewarning time warning light: <ul style="list-style-type: none"> OFF 	Prewarning time warning light: <ul style="list-style-type: none"> 3 seconds Warning light flashes before gate moves 	TorMinal Mem 016
6	Only if DIP 4 = ON (status display): <ul style="list-style-type: none"> Gate open – relay contact open Gate closed – relay contact closed 	Only if DIP 4 = ON (status display): <ul style="list-style-type: none"> Gate open – relay contact closed Gate closed – relay contact open 	Terminals 37 + 38
7	Premature closing (during automatic closing): <ul style="list-style-type: none"> OFF 	Premature closing (during automatic closing): <ul style="list-style-type: none"> ON Closing delay after actuating the photo eye, e.g. after drive-throughs: <ul style="list-style-type: none"> 5 seconds Closing delay without actuating the photo eye: <ul style="list-style-type: none"> Set stay open time (SOT) 	TorMinal Mem 021
8	Test mode: <ul style="list-style-type: none"> Operator does not learn any values Setting the limit switches 	Continuous operation: <p>The operator learns continuously while the gate opens and closes:</p> <ul style="list-style-type: none"> Force values Running time Closing delay 	Leave DIP switch 8 in ON position after programming.

TorMinal settings

Memory space Mem	Setting range Val	Value		Functional description
		Increment	Val	
014	0–15	0–7		Warning light, dead man operation, force cut-off 2 Example: Warning light is to flash (1) + Force cut-off 2 (4): 1 + 4 = 5, enter and save this value.
		0		Warning light lights up during a gate movement
		1		Warning light flashes during a gate movement
		2		Dead man operation
		4		Switch power deactivation (1 -> 2): More sensitive activation for smaller B dimensions and smooth-running gates.
016	8–40		0.25 s	lead time Early warning time period Example: Displayed value 40 = 10 seconds
021	1–20		1 s	Closing time photo eyes Duration of the open hold time, after driving through the photo eyes, only in conjunction with automatic closing function.
022	1–255		1 s	Switching duration relay contact Duration that the relay contact is closed after motor start.
042	0–8		0.25 s	Motor 2: Close trailing gate After reaching the gate CLOSED end position, the operator continues to run in order to close the gate cleanly (gate leaves are braced with each other by this).

Wiring diagram

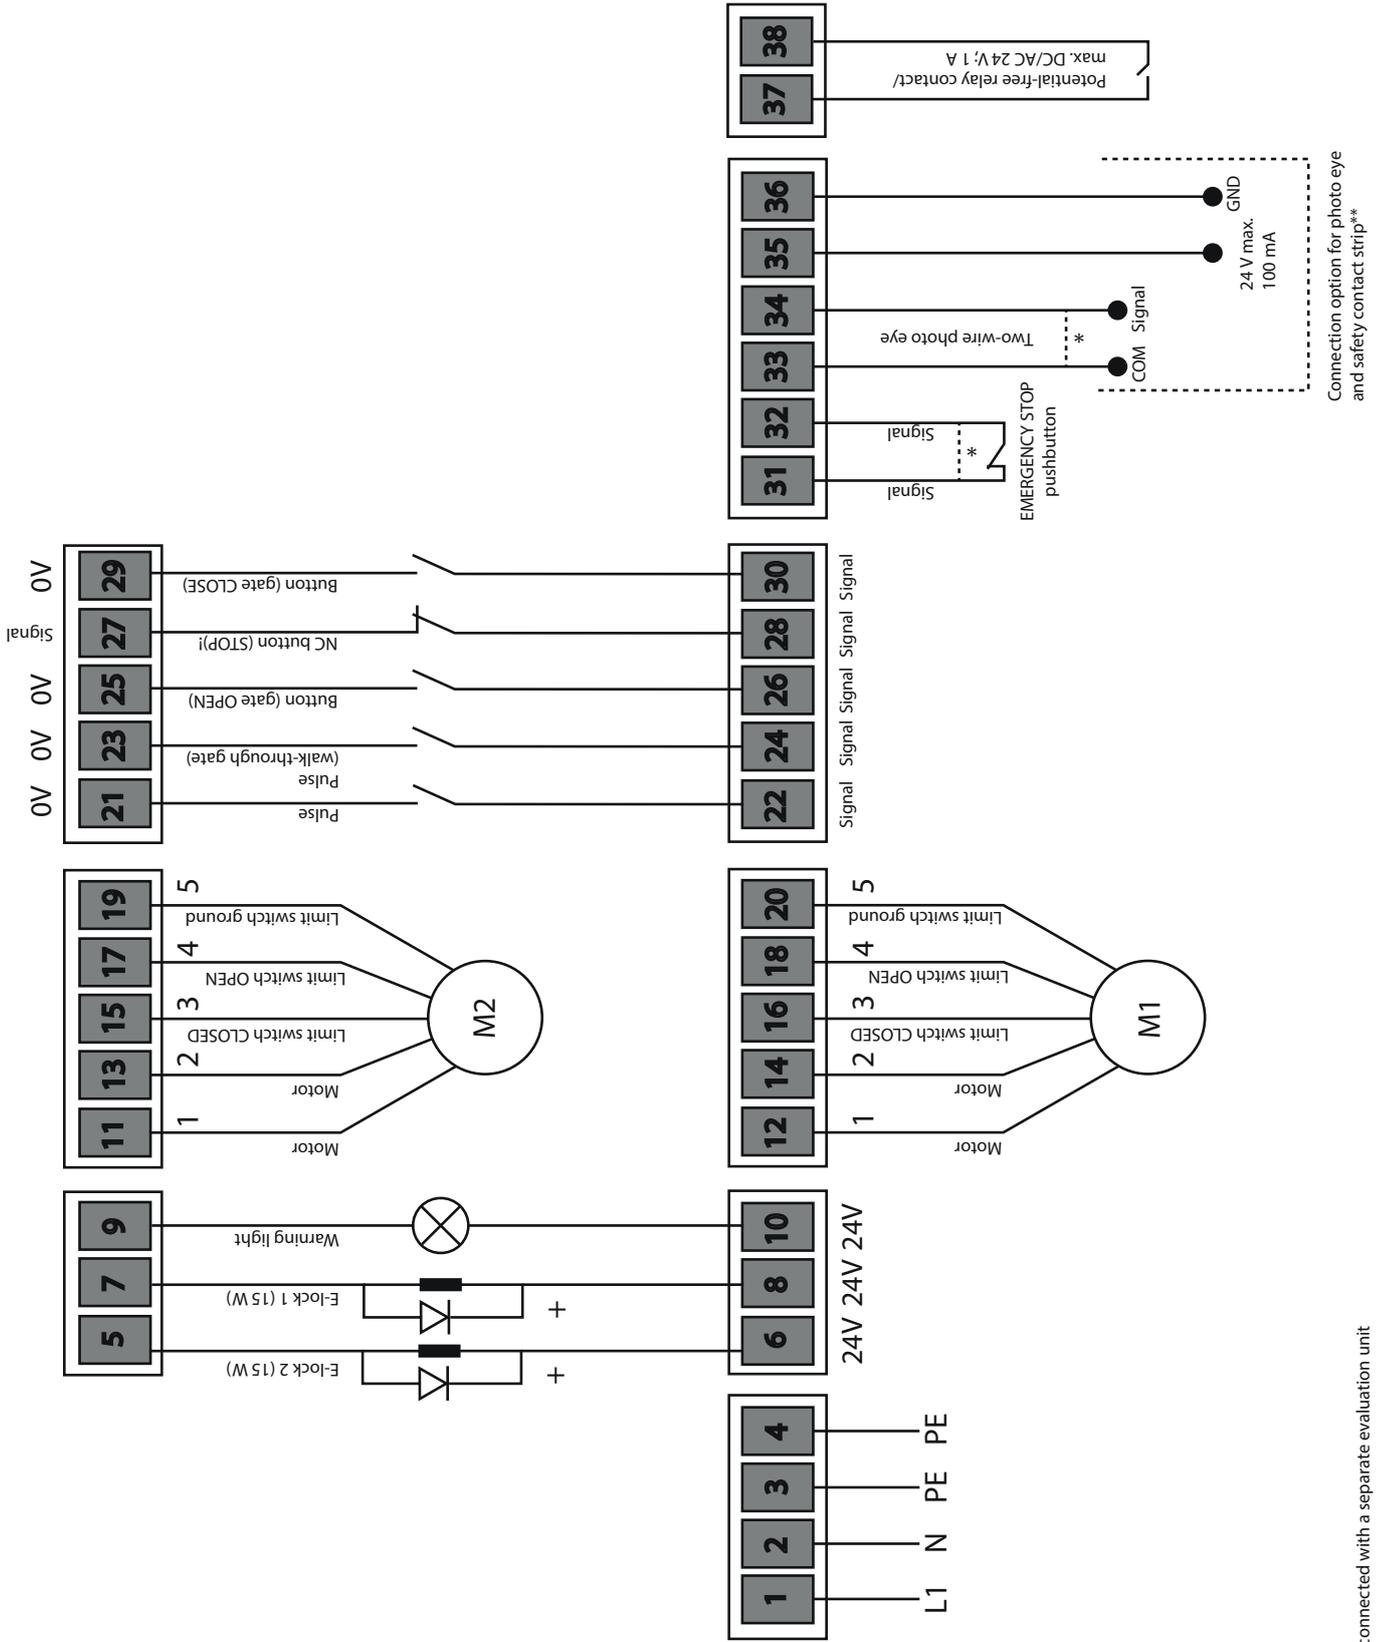

SOMMER Antriebs- und Funktechnik GmbH

Hans-Böckler-Straße 21–27
D-73230 Kirchheim/Teck
Germany

 +49 (0) 7021 8001-0

 +49 (0) 7021 8001-100

info@sommer.eu
www.sommer.eu

© Copyright 2019 All rights reserved.